

1. **REMOVE HEADLIGHT WASHER ACTUATOR SUB-ASSEMBLY LH (w/ Headlight Cleaner System)**  
Refer to REMOVAL [10/2014 - ]

2. **REMOVE HEADLIGHT WASHER ACTUATOR SUB-ASSEMBLY RH (w/ Headlight Cleaner System)**

**HINT:**

Use the same procedure described for the LH side.

3. **REMOVE HEADLIGHT CLEANER WASHER NOZZLE COVER LH (w/ Headlight Cleaner System)**  
Refer to REMOVAL [10/2014 - ]

4. **REMOVE HEADLIGHT CLEANER WASHER NOZZLE COVER RH (w/ Headlight Cleaner System)**  
**HINT:**


Use the same procedure described for the LH side.

5. **REMOVE NO. 2 HEADLIGHT CLEANER HOSE (w/ Headlight Cleaner System)**  
Refer to PROCEDURE - Step 4

6. **REMOVE HEADLIGHT CLEANER WASHER BRACKET (w/ Headlight Cleaner System)**  
Refer to PROCEDURE - Step 5

7. **REMOVE NO. 3 ENGINE ROOM WIRE (w/ Intuitive Parking Assist System)**

- a. Disconnect the 4 connectors.
- b. Detach the 8 clamps and remove the No. 3 engine room wire.

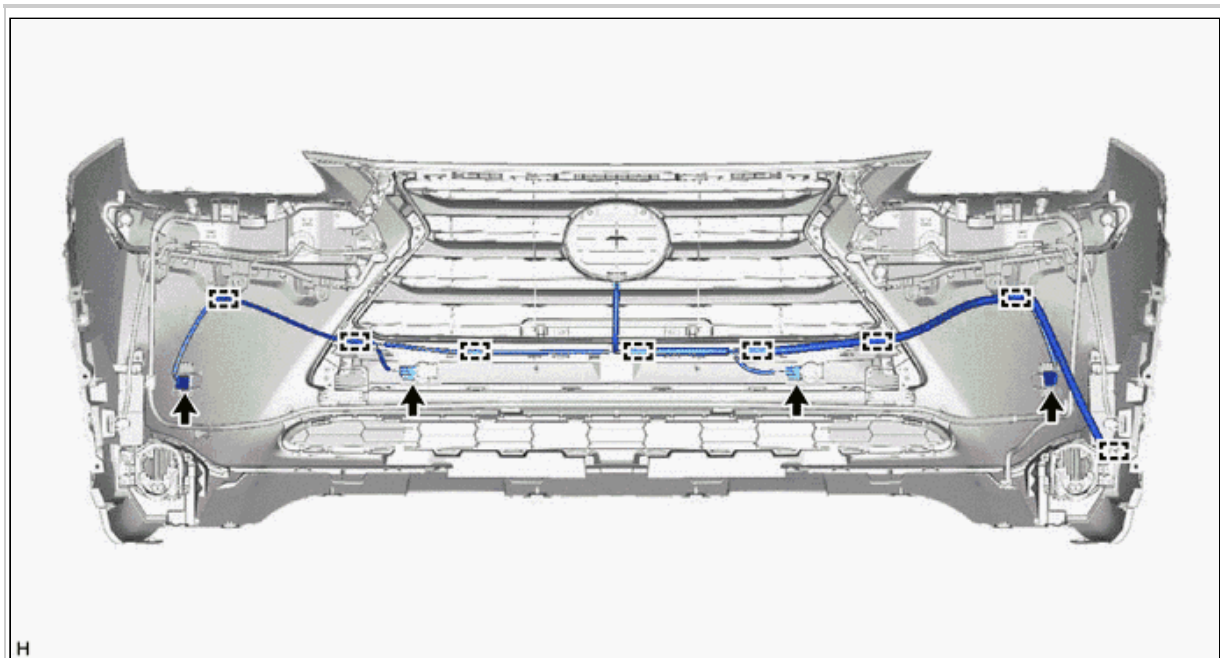


Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

8. **REMOVE NO. 1 ULTRASONIC SENSOR (w/ Intuitive Parking Assist System)**  
Refer to PROCEDURE - Step 4

9. **REMOVE NO. 2 ULTRASONIC SENSOR (w/ Intuitive Parking Assist System)**  
Refer to PROCEDURE - Step 5

10. **REMOVE NO. 1 ULTRASONIC SENSOR RETAINER (w/ Intuitive Parking Assist System)**  
Refer to PROCEDURE - Step 6
11. **REMOVE NO. 2 ULTRASONIC SENSOR RETAINER (w/ Intuitive Parking Assist System)**  
Refer to PROCEDURE - Step 7
12. **REMOVE CENTER RADIATOR GRILLE MOULDING LH (w/o Intuitive Parking Assist System)**
  - a. Detach the 2 claws and remove the center radiator grille moulding LH.

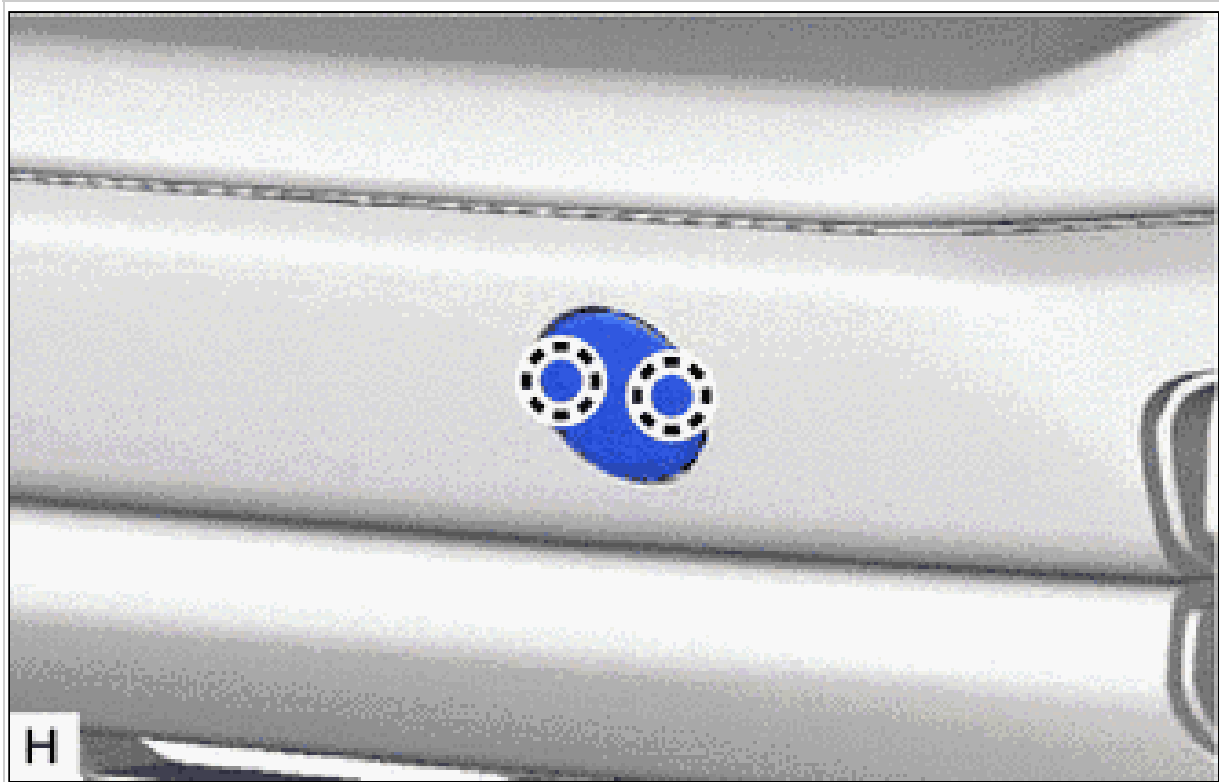


Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

13. **REMOVE CENTER RADIATOR GRILLE MOULDING RH (w/o Intuitive Parking Assist System)**  
**HINT:**  
Use the same procedure described for the LH side.
14. **REMOVE CLEARANCE LIGHT ASSEMBLY LH**
  - a. for LED Type Side Turn Signal Light:  
Refer to REMOVAL [10/2014 - ]
  - b. for Bulb Type Side Turn Signal Light:  
Refer to REMOVAL [10/2014 - ]
15. **REMOVE CLEARANCE LIGHT ASSEMBLY RH**  
**HINT:**  
Use the same procedure described for the LH side.
16. **REMOVE FOG LIGHT ASSEMBLY LH**  
Refer to REMOVAL [10/2014 - ]
17. **REMOVE FOG LIGHT ASSEMBLY RH**  
**HINT:**

Use the same procedure described for the LH side.

#### 18. REMOVE FRONT BUMPER NO. 2 RETAINER BRACKET

- a. Remove the 3 screws.

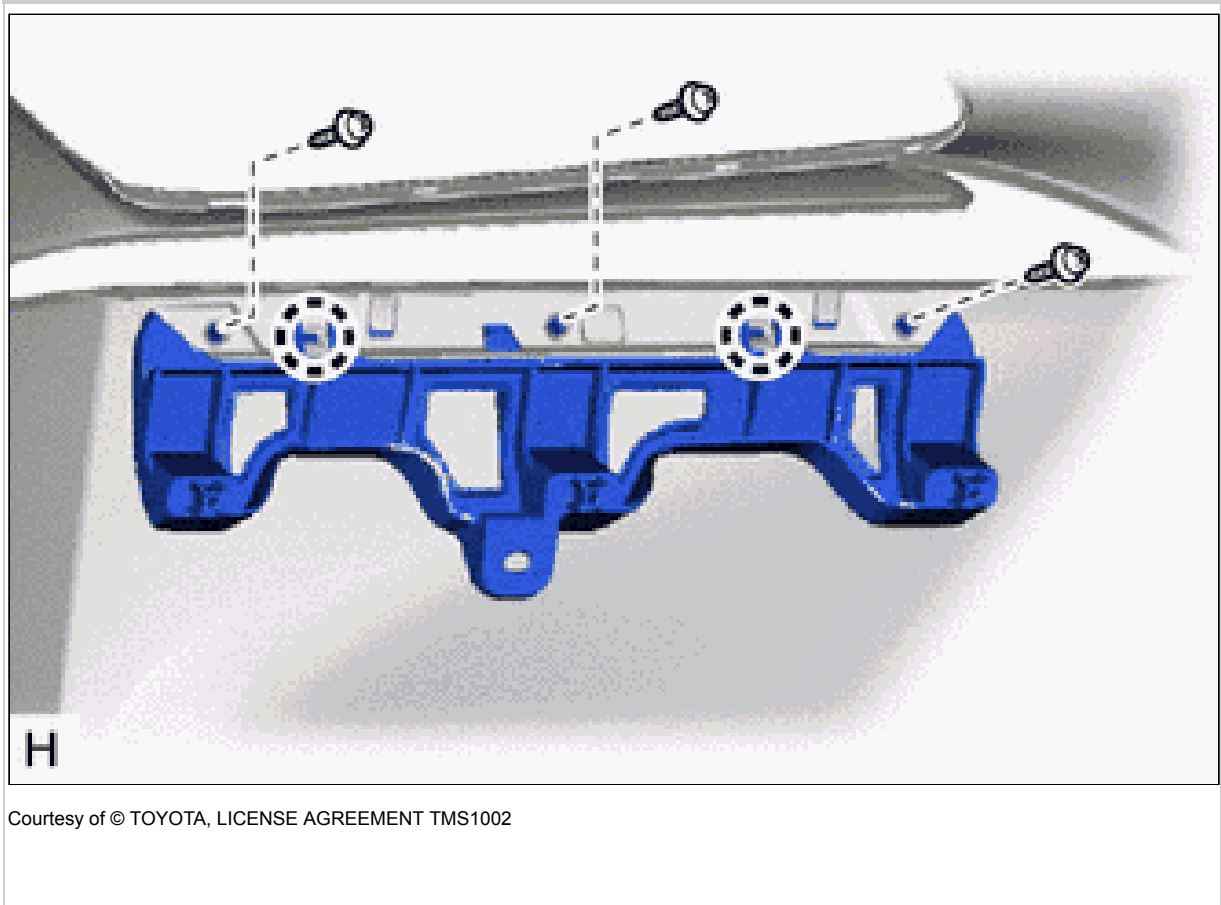

- b. Detach the 2 claws and remove the front bumper No. 2 retainer bracket.


#### 19. REMOVE FRONT BUMPER NO. 1 RETAINER BRACKET


**HINT:**

Use the same procedure described for the front bumper No. 2 retainer bracket.

#### 20. REMOVE AIR INTAKE DUCT LH

- a. Remove the 2 clips



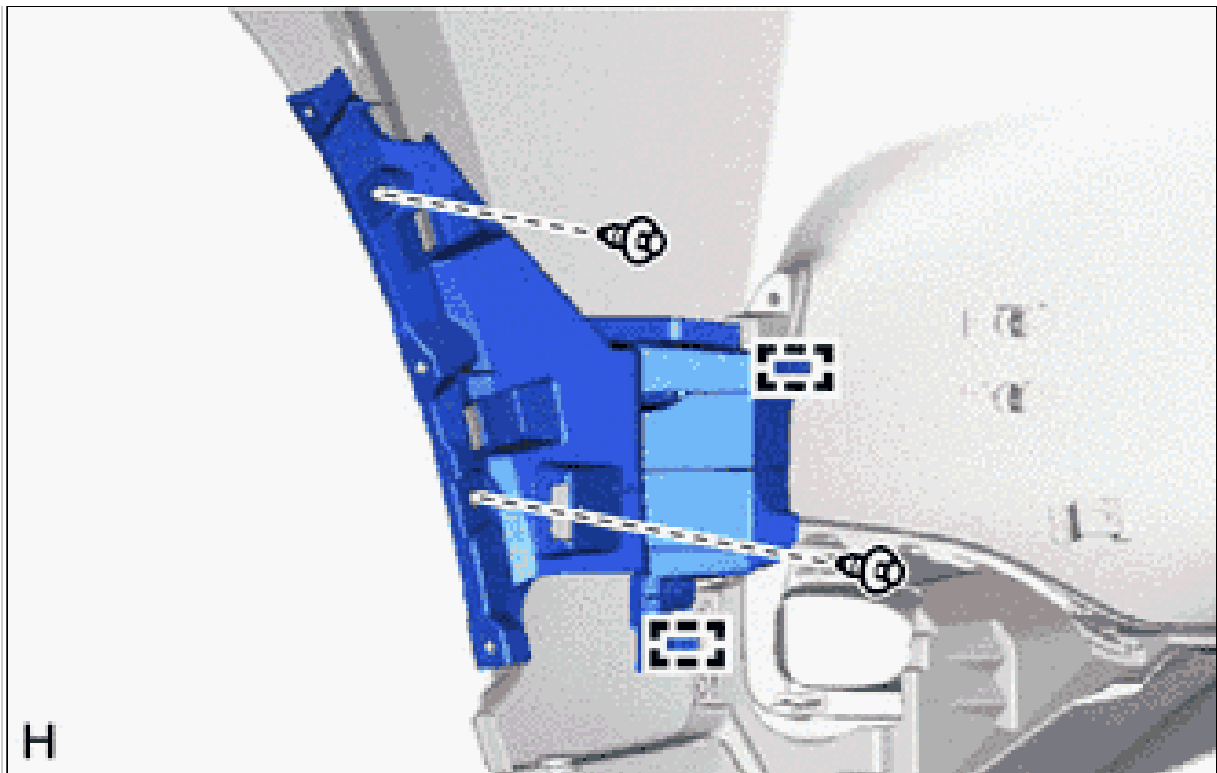

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

- b. Detach the 2 guides and remove the air intake duct LH.


**21. REMOVE AIR INTAKE DUCT RH**


**HINT:**

Use the same procedure described for the LH side.

**22. REMOVE HOOD TO RADIATOR GRILLE SEAL**

- a. Detach the 14 clips and remove the hood to radiator grille seal.




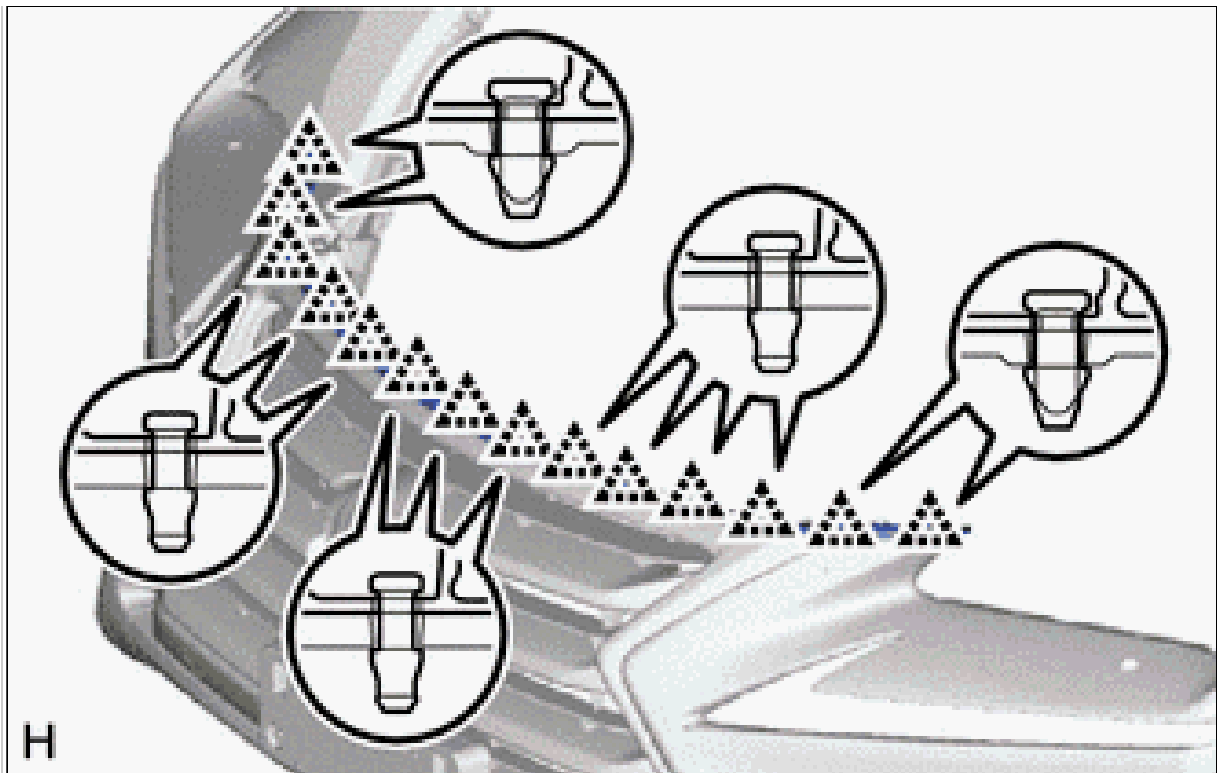

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

### 23. REMOVE FRONT BUMPER HOLE COVER LH

- a. Detach the 3 claws, guide and remove the front bumper hole cover LH.

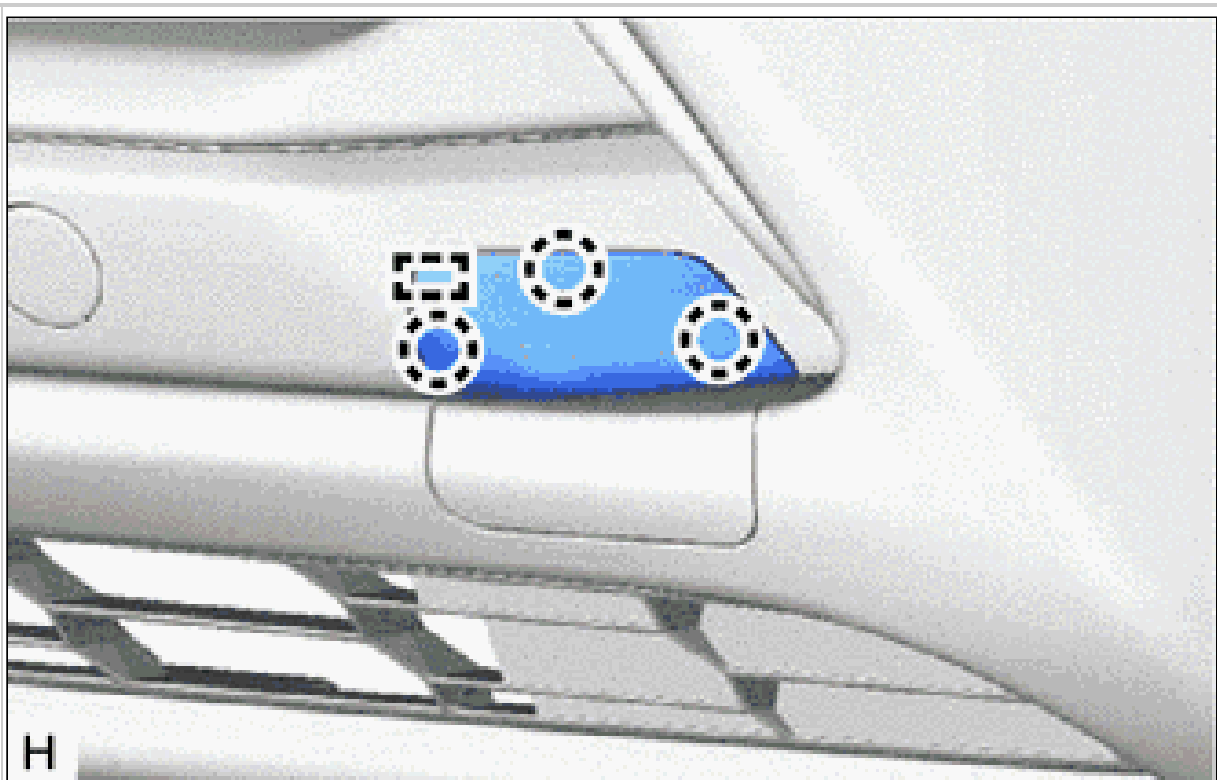

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002


**24. REMOVE FRONT BUMPER HOLE COVER RH**

**HINT:**

Use the same procedure described for the LH side.

**25. REMOVE FRONT BUMPER NO. 2 GUARD COVER LH**

- a. Detach the 3 claws, guide and remove the front bumper No. 2 guard cover LH.

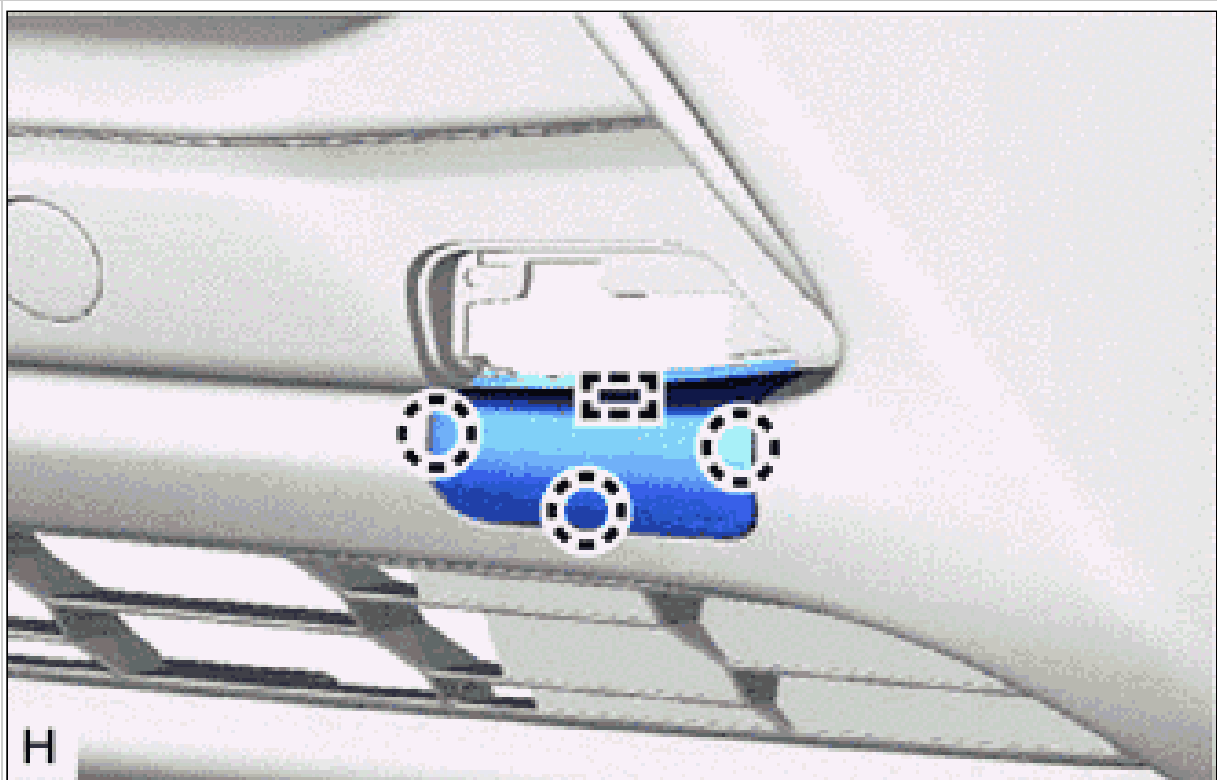

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

**26. REMOVE FRONT BUMPER NO. 2 GUARD COVER RH**

**HINT:**


Use the same procedure described for the LH side.

**27. REMOVE RADIATOR GRILLE ASSEMBLY**

Refer to REMOVAL [10/2014 - ]

**28. REMOVE LOWER NO. 1 RADIATOR GRILLE**


- a. Detach the 18 claws and remove the lower No. 1 radiator grille.

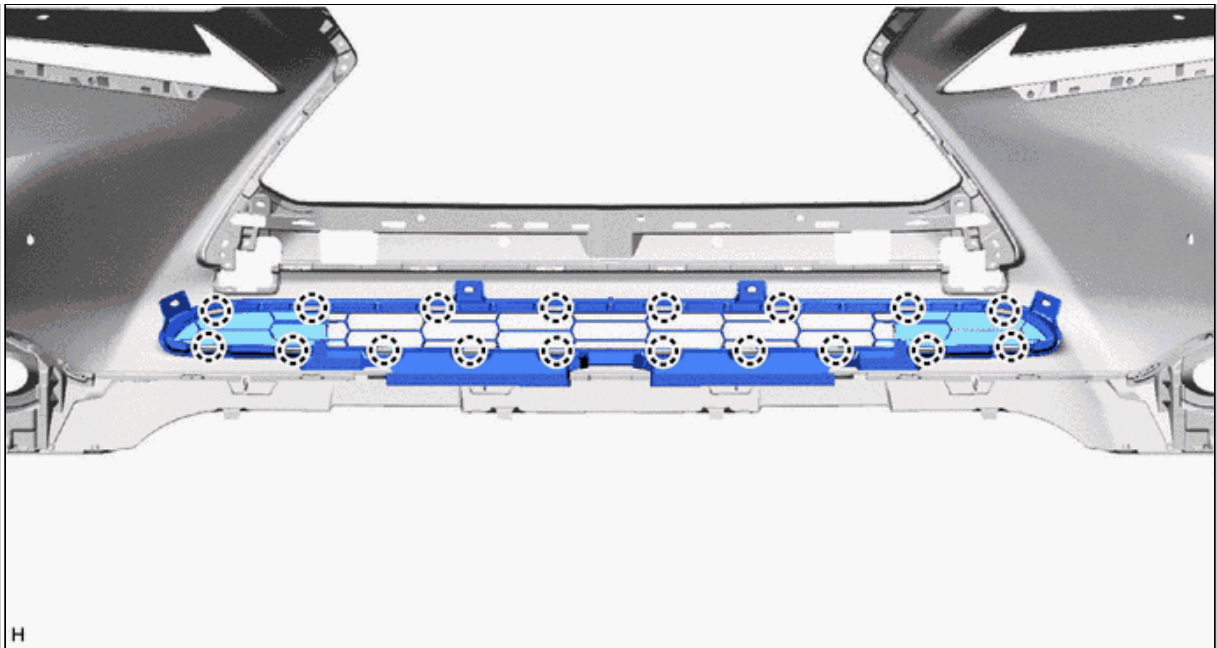

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

## 29. REMOVE FRONT BUMPER GUARD


- a. Remove the 2 clips labeled A.
- b. Remove the 4 clips labeled B.
- c. Remove the 4 clips labeled C.
- d. Detach the 14 claws and remove the front bumper guard.

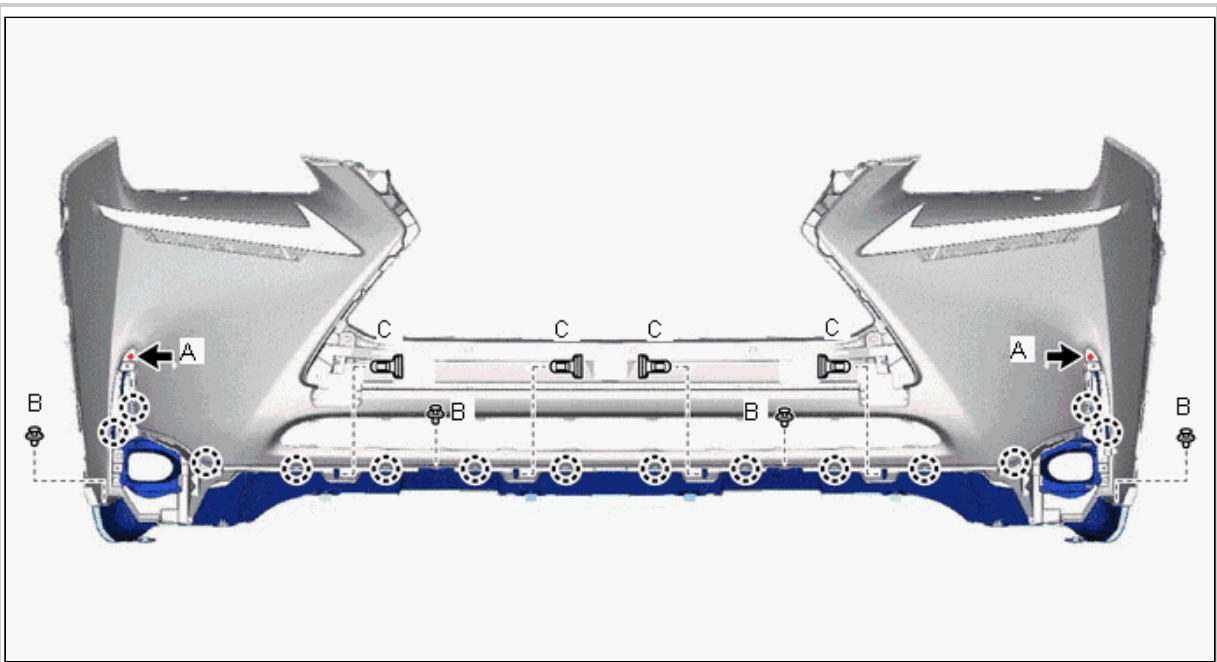

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

### 30. REMOVE FOG LIGHT COVER LH

- a. Detach the 3 claws and remove the fog light cover LH.

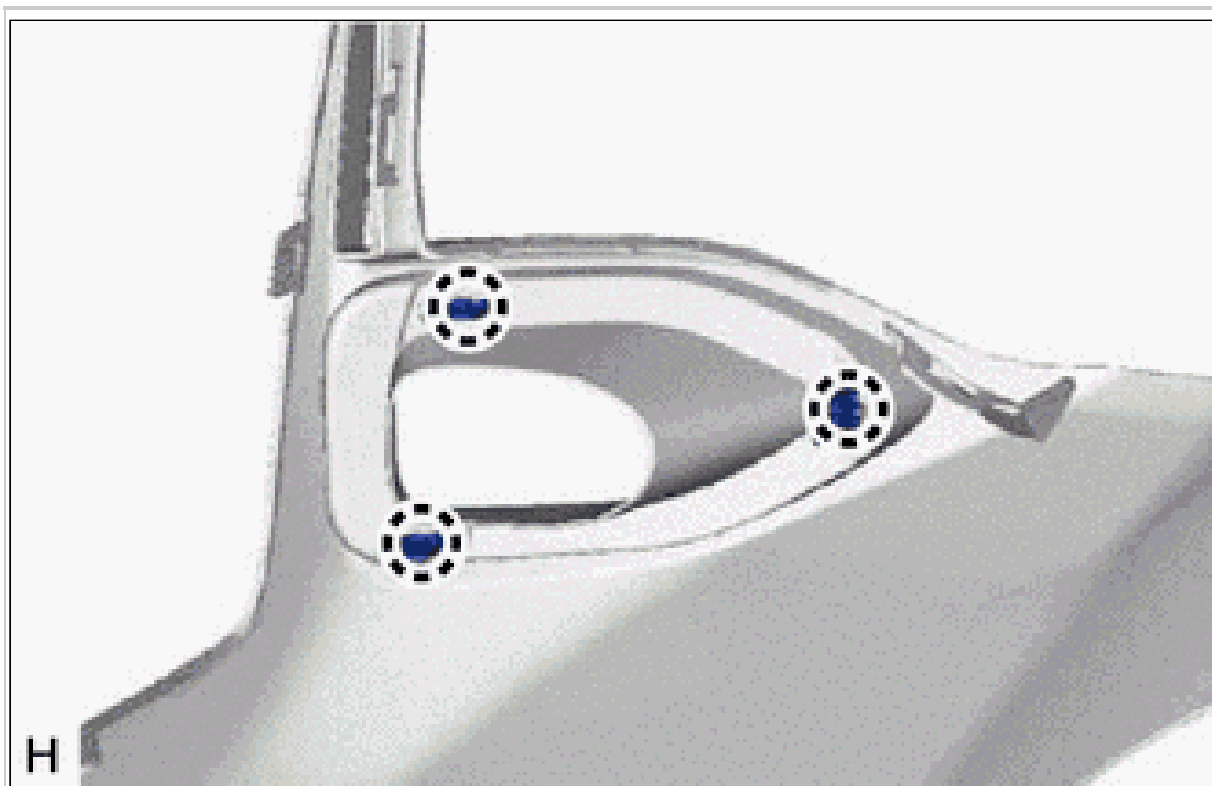

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

### 31. REMOVE FOG LIGHT COVER RH

**HINT:**

Use the same procedure described for the LH side.