


RADIATOR GRILLE(EXCEPT SPORT PACKAGE) > COMPONENTS [10/2014 -] > ILLUSTRATION

Fig 1: Identifying Radiator Grille (Except Sport Package) Replacement Components (1 Of 2)

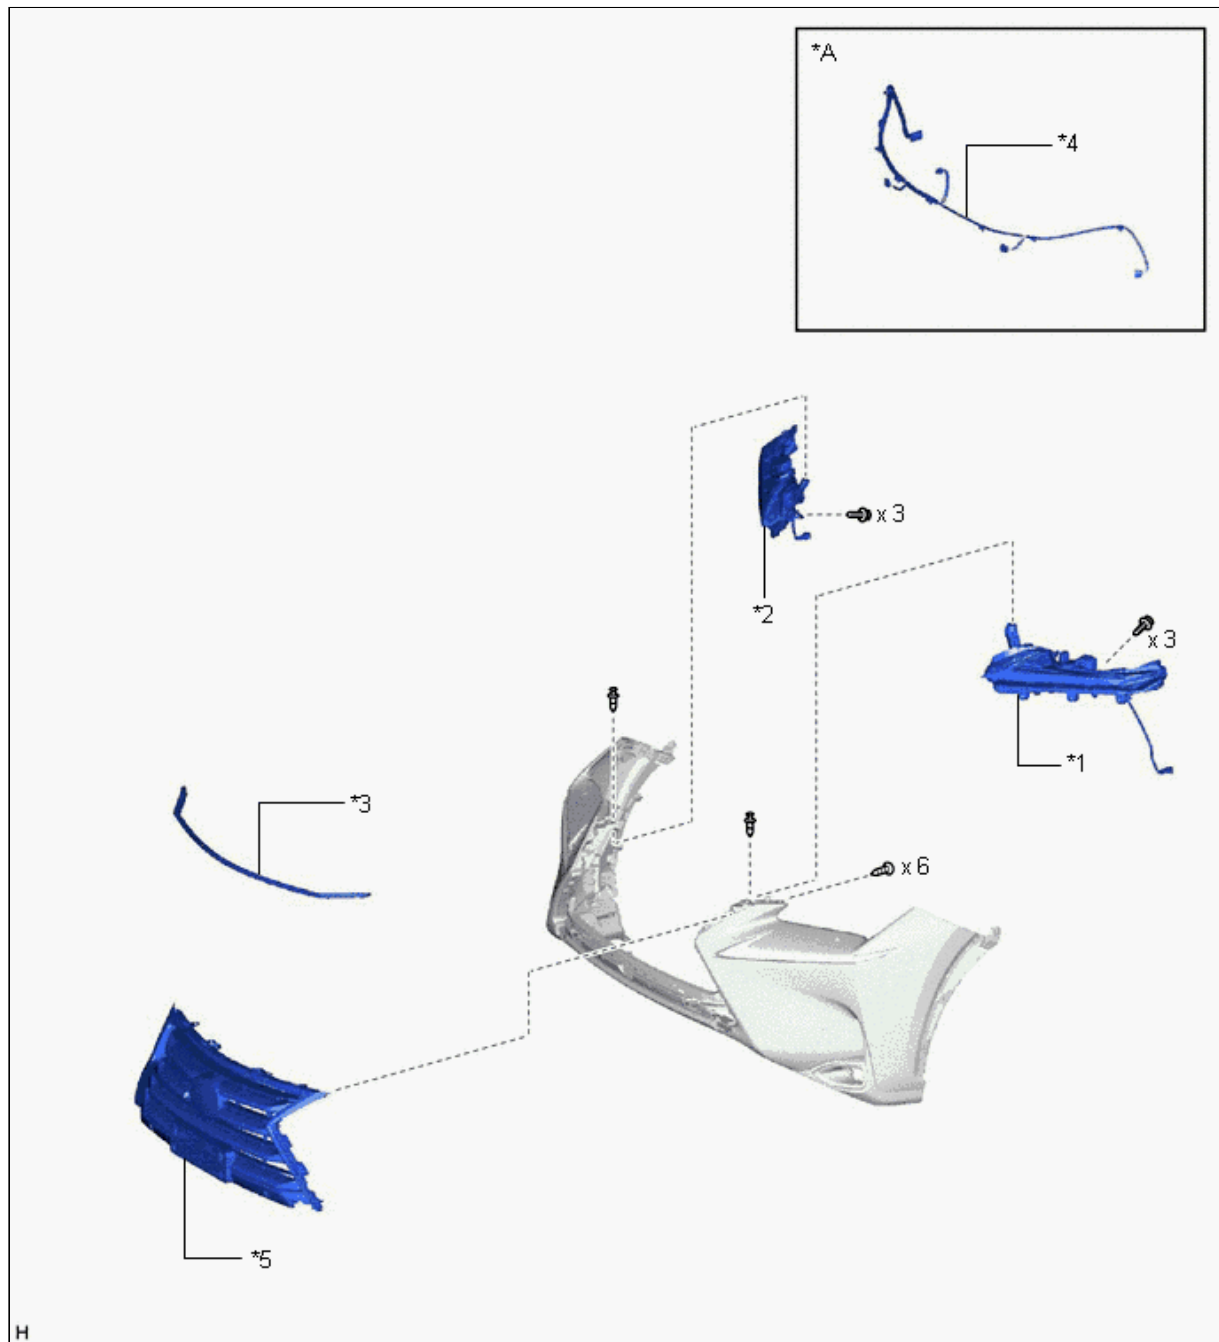


Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

*A	w/ Intuitive Parking Assist System	-	-
*1	CLEARANCE LIGHT ASSEMBLY LH	*2	CLEARANCE LIGHT ASSEMBLY RH
*3	HOOD TO RADIATOR GRILLE SEAL	*4	NO. 3 ENGINE ROOM WIRE

*5	RADIATOR GRILLE ASSEMBLY	-	-
----	--------------------------	---	---

RADIATOR GRILLE(EXCEPT SPORT PACKAGE) > COMPONENTS [10/2014 -] > ILLUSTRATION

Fig 1: Identifying Radiator Grille (Except Sport Package) Replacement Components (2 Of 2)

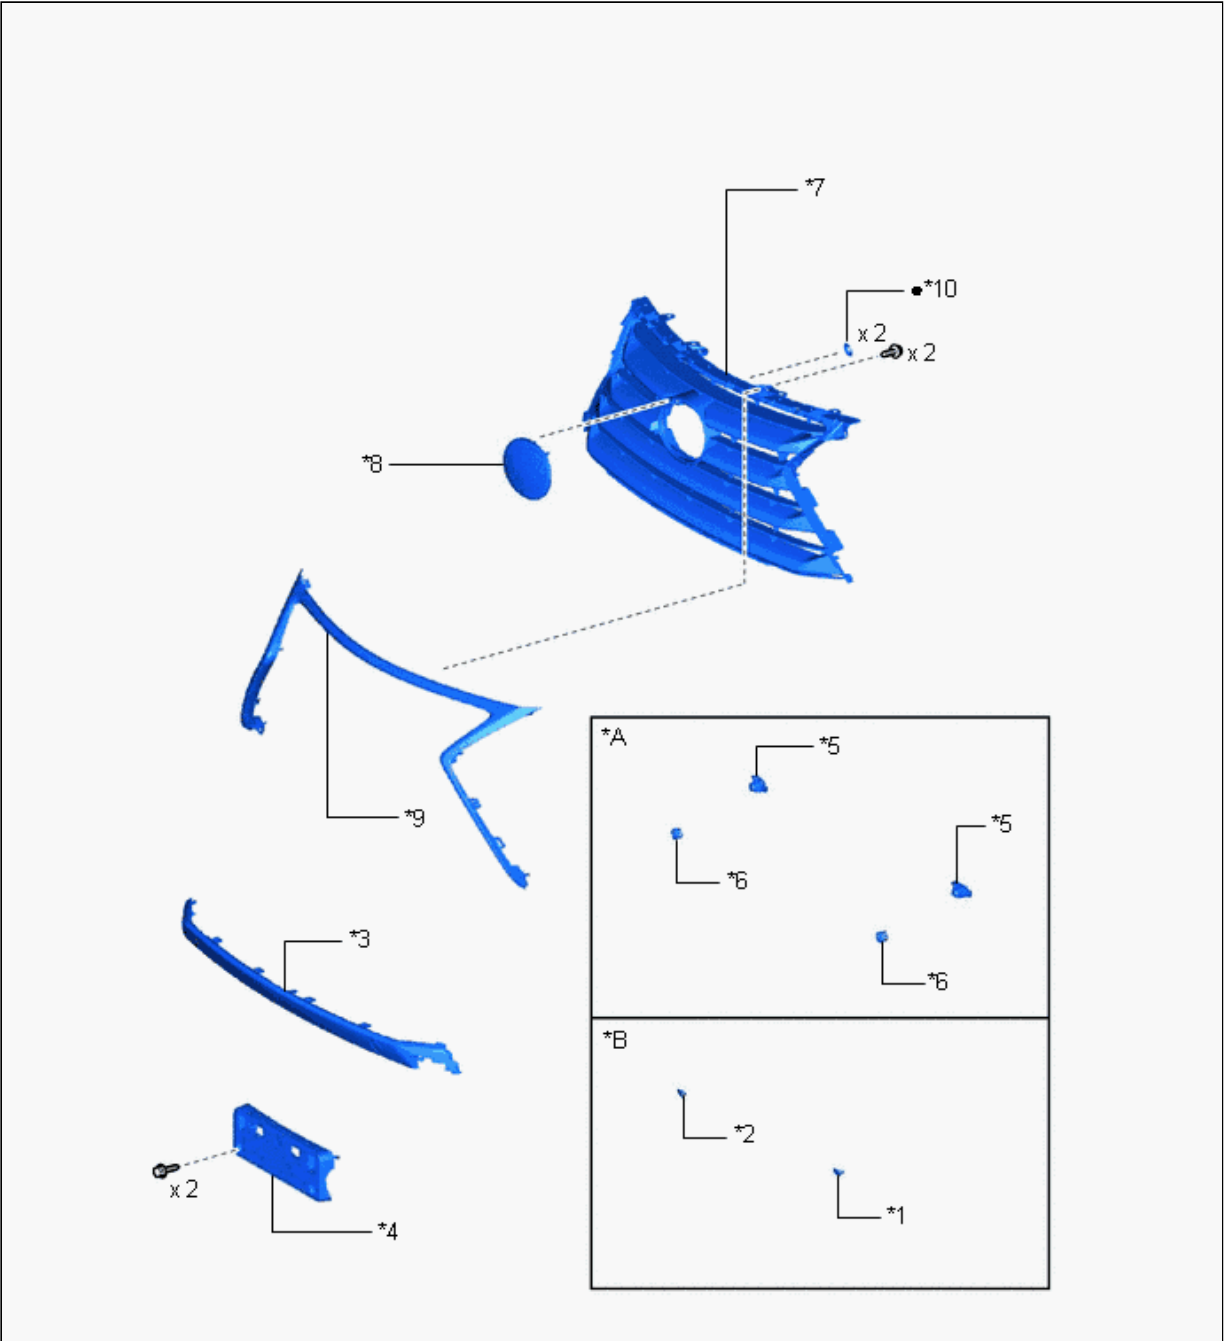

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

*A	w/ Intuitive Parking Assist System	*B	w/o Intuitive Parking Assist System
*1	CENTER RADIATOR GRILLE MOULDING LH	*2	CENTER RADIATOR GRILLE MOULDING RH

*3	FRONT BUMPER EXTENSION	*4	FRONT BUMPER EXTENSION MOUNTING BRACKET
*5	NO. 1 ULTRASONIC SENSOR	*6	NO. 1 ULTRASONIC SENSOR RETAINER
*7	RADIATOR GRILLE	*8	RADIATOR GRILLE EMBLEM
*9	RADIATOR GRILLE MOULDING	*10	SPRING NUT
•	Non-reusable part	-	-

RADIATOR GRILLE(EXCEPT SPORT PACKAGE) > REMOVAL [10/2014 -] > PROCEDURE

1. REMOVE FRONT BUMPER COVER

Refer to REMOVAL [10/2014 -]

2. REMOVE NO. 3 ENGINE ROOM WIRE (w/ Intuitive Parking Assist System)

See step 7

3. REMOVE CLEARANCE LIGHT ASSEMBLY LH

a. for LED Type Side Turn Signal Light:

Refer to REMOVAL [10/2014 -]

b. for Bulb Type Side Turn Signal Light:

Refer to REMOVAL [10/2014 -]

4. REMOVE CLEARANCE LIGHT ASSEMBLY RH

HINT:

Use the same procedure described for the LH side.


5. REMOVE HOOD TO RADIATOR GRILLE SEAL


See step 22

6. REMOVE RADIATOR GRILLE ASSEMBLY

a. Remove the 6 screws.

b. Detach the 10 claws and remove the radiator grille assembly.



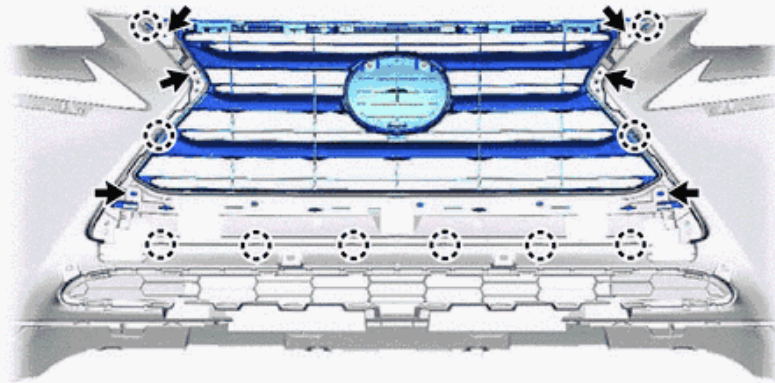


H

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

RADIATOR GRILLE(EXCEPT SPORT PACKAGE) > DISASSEMBLY [10/2014 -] > PROCEDURE

- 1. REMOVE NO. 1 ULTRASONIC SENSOR (w/ Intuitive Parking Assist System)**
Refer to PROCEDURE - Step 4
- 2. REMOVE NO. 1 ULTRASONIC SENSOR RETAINER (w/ Intuitive Parking Assist System)**
Refer to PROCEDURE - Step 6
- 3. REMOVE CENTER RADIATOR GRILLE MOULDING LH (w/o Intuitive Parking Assist System)**
See step 12
- 4. REMOVE CENTER RADIATOR GRILLE MOULDING RH (w/o Intuitive Parking Assist System)**
HINT:
Use the same procedure described for the LH side.
- 5. REMOVE FRONT BUMPER EXTENSION MOUNTING BRACKET**

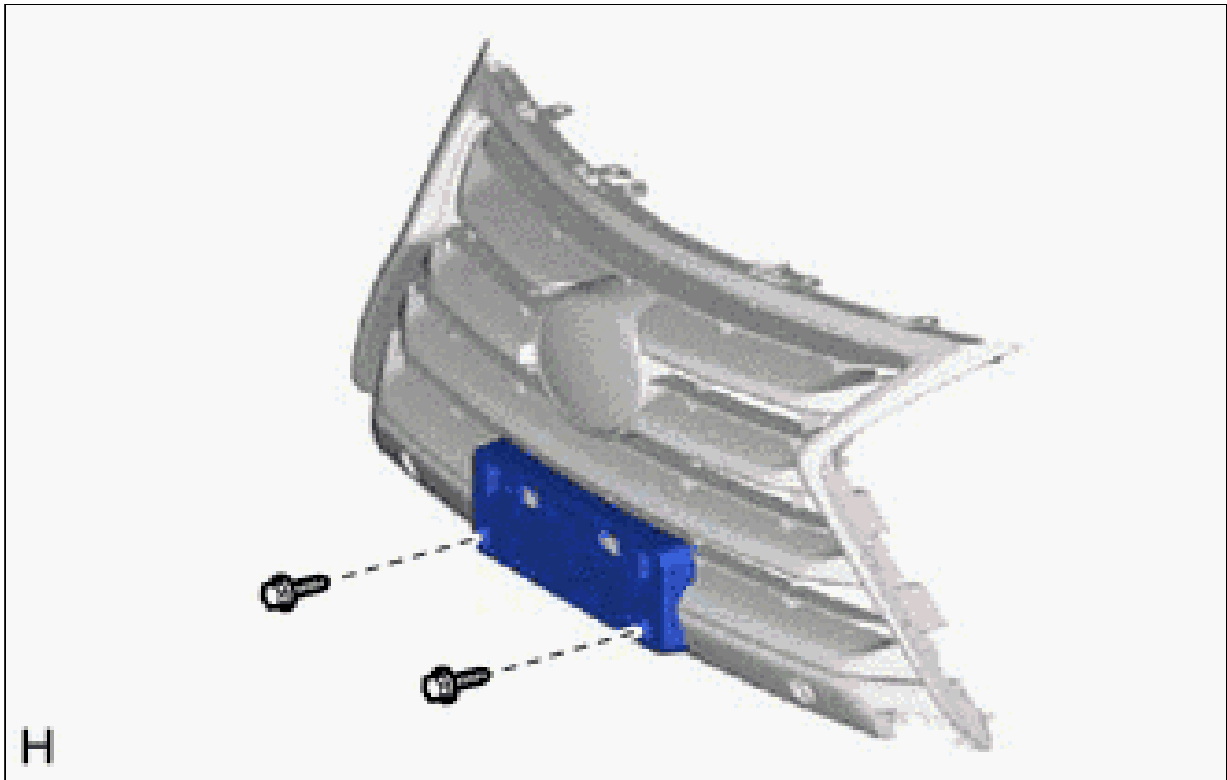


Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002

- a. Remove the 2 screws and front bumper extension mounting bracket.

6. REMOVE FRONT BUMPER EXTENSION


- a. Detach the 6 claws, guides and remove the front bumper extension.

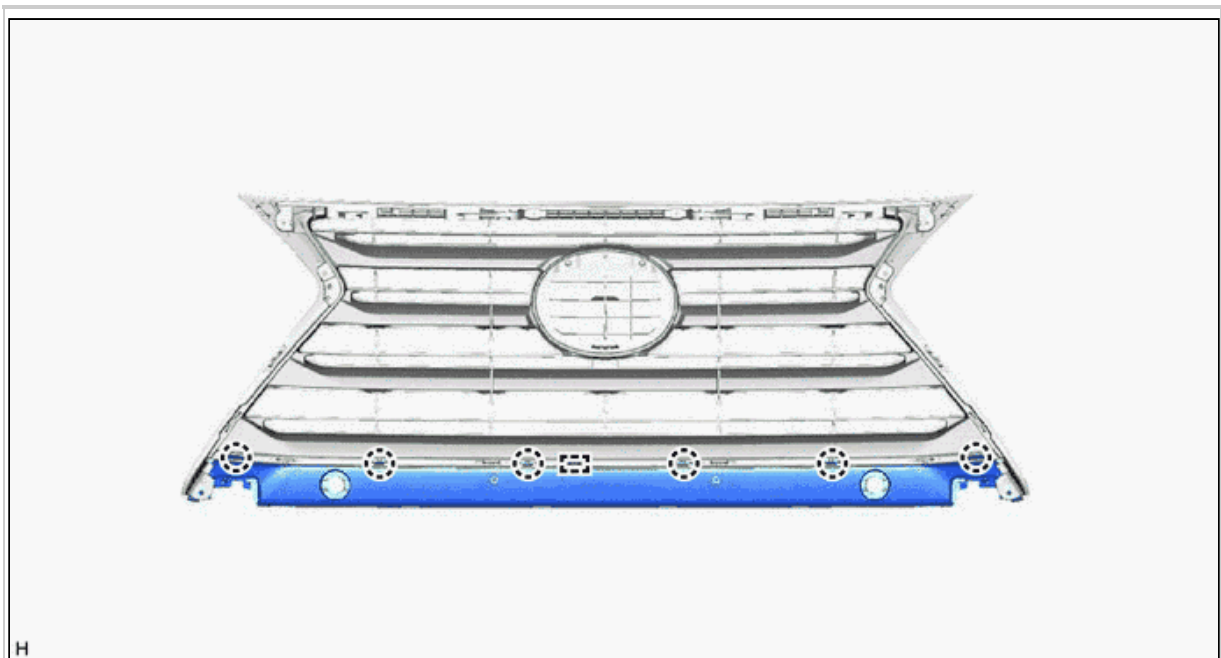

Courtesy of © TOYOTA, LICENSE AGREEMENT TMS1002


7. REMOVE RADIATOR GRILLE

- a. Remove the 2 screws.
- b. Detach the 4 claws and remove the radiator grille from the radiator grille moulding.

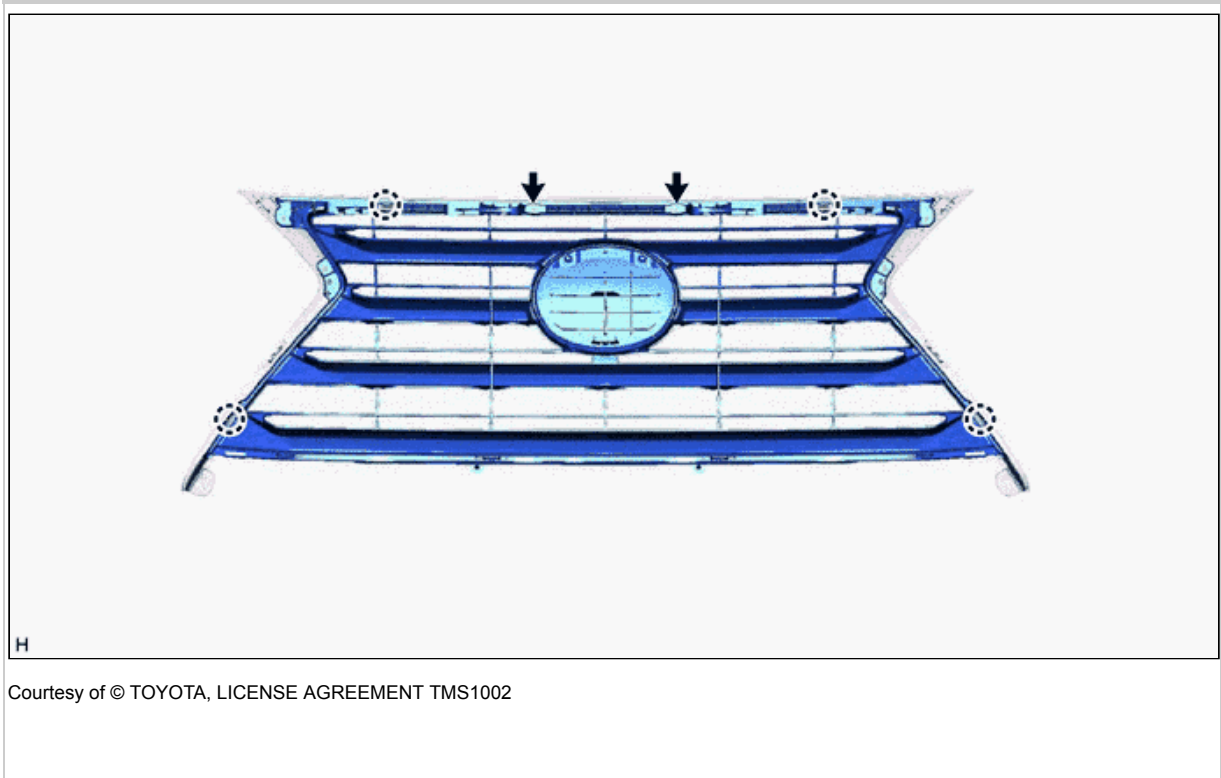

8. REMOVE RADIATOR GRILLE EMBLEM

- a. Remove the 2 spring nuts.

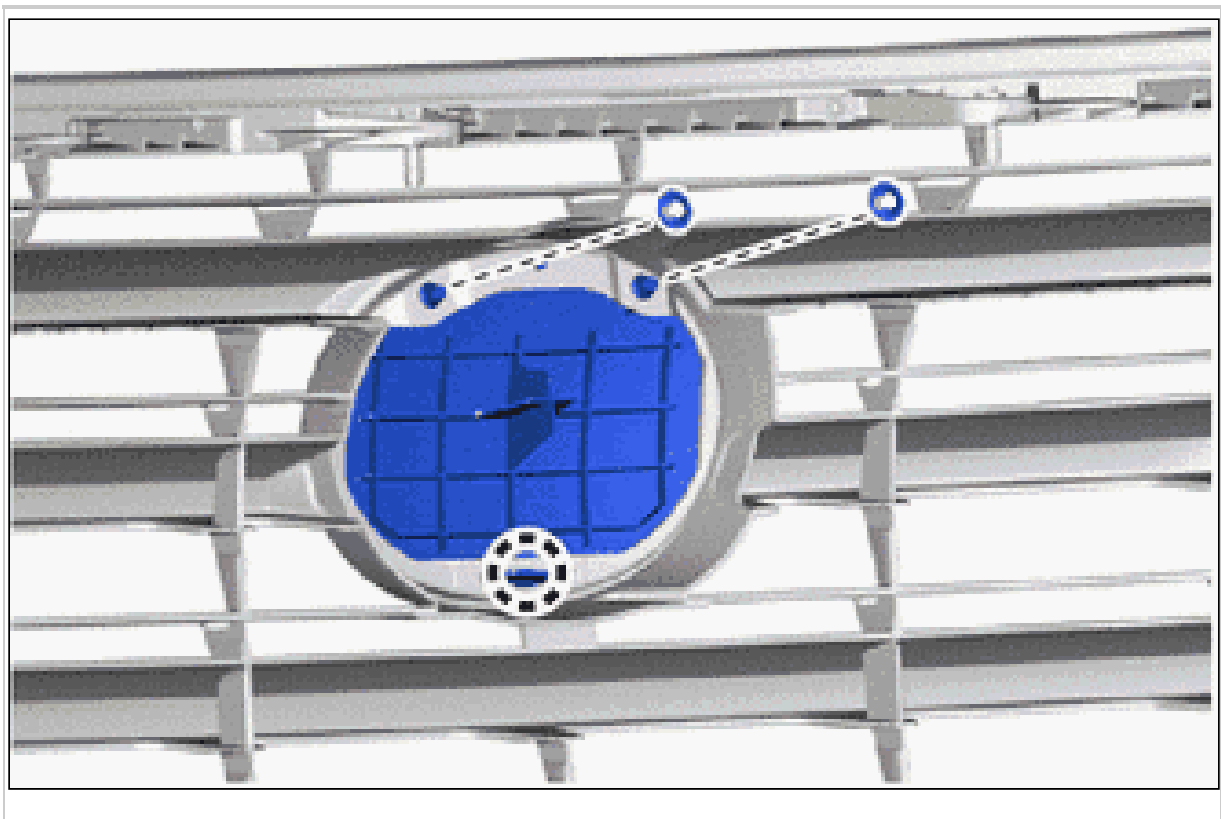

- b. Detach the claw and remove the radiator grille emblem.

RADIATOR GRILLE(EXCEPT SPORT PACKAGE) > REASSEMBLY [10/2014 -] > PROCEDURE

1. INSTALL RADIATOR GRILLE EMBLEM

- a. Attach the claw to install the radiator grille emblem.
- b. Install the 2 new spring nuts.

2. INSTALL RADIATOR GRILLE

- a. Attach the 4 claws to install the radiator grille to the radiator grille moulding.
- b. Install the 2 screws.

3. INSTALL FRONT BUMPER EXTENSION

- a. Attach the guide and 6 claws to install the front bumper extension.

4. INSTALL FRONT BUMPER EXTENSION MOUNTING BRACKET

- a. Install the front bumper extension mounting bracket with the 2 screws.

5. INSTALL CENTER RADIATOR GRILLE MOULDING LH (w/o Intuitive Parking Assist System)

See step 19

6. INSTALL CENTER RADIATOR GRILLE MOULDING RH (w/o Intuitive Parking Assist System)

HINT:

Use the same procedure described for the LH side.

7. INSTALL NO. 1 ULTRASONIC SENSOR RETAINER (w/ Intuitive Parking Assist System)

Refer to PROCEDURE - Step 2

8. INSTALL NO. 1 ULTRASONIC SENSOR (w/ Intuitive Parking Assist System)

Refer to PROCEDURE - Step 4

RADIATOR GRILLE(EXCEPT SPORT PACKAGE) > INSTALLATION [10/2014 -] > PROCEDURE

1. INSTALL RADIATOR GRILLE ASSEMBLY

- a. Attach the 10 claws to install the radiator grille assembly.
- b. Install the 6 screws.

2. INSTALL HOOD TO RADIATOR GRILLE SEAL

See step 10

3. INSTALL CLEARANCE LIGHT ASSEMBLY RH

a. for LED Type Side Turn Signal Light:

Refer to INSTALLATION [10/2014 -]

b. for Bulb Type Side Turn Signal Light:

Refer to INSTALLATION [10/2014 -]

4. INSTALL CLEARANCE LIGHT ASSEMBLY LH

HINT:

Use the same procedure described for the LH side.

5. INSTALL NO. 3 ENGINE ROOM WIRE (w/ Intuitive Parking Assist System)

See step 25

6. INSTALL FRONT BUMPER COVER

Refer to INSTALLATION [10/2014 -]