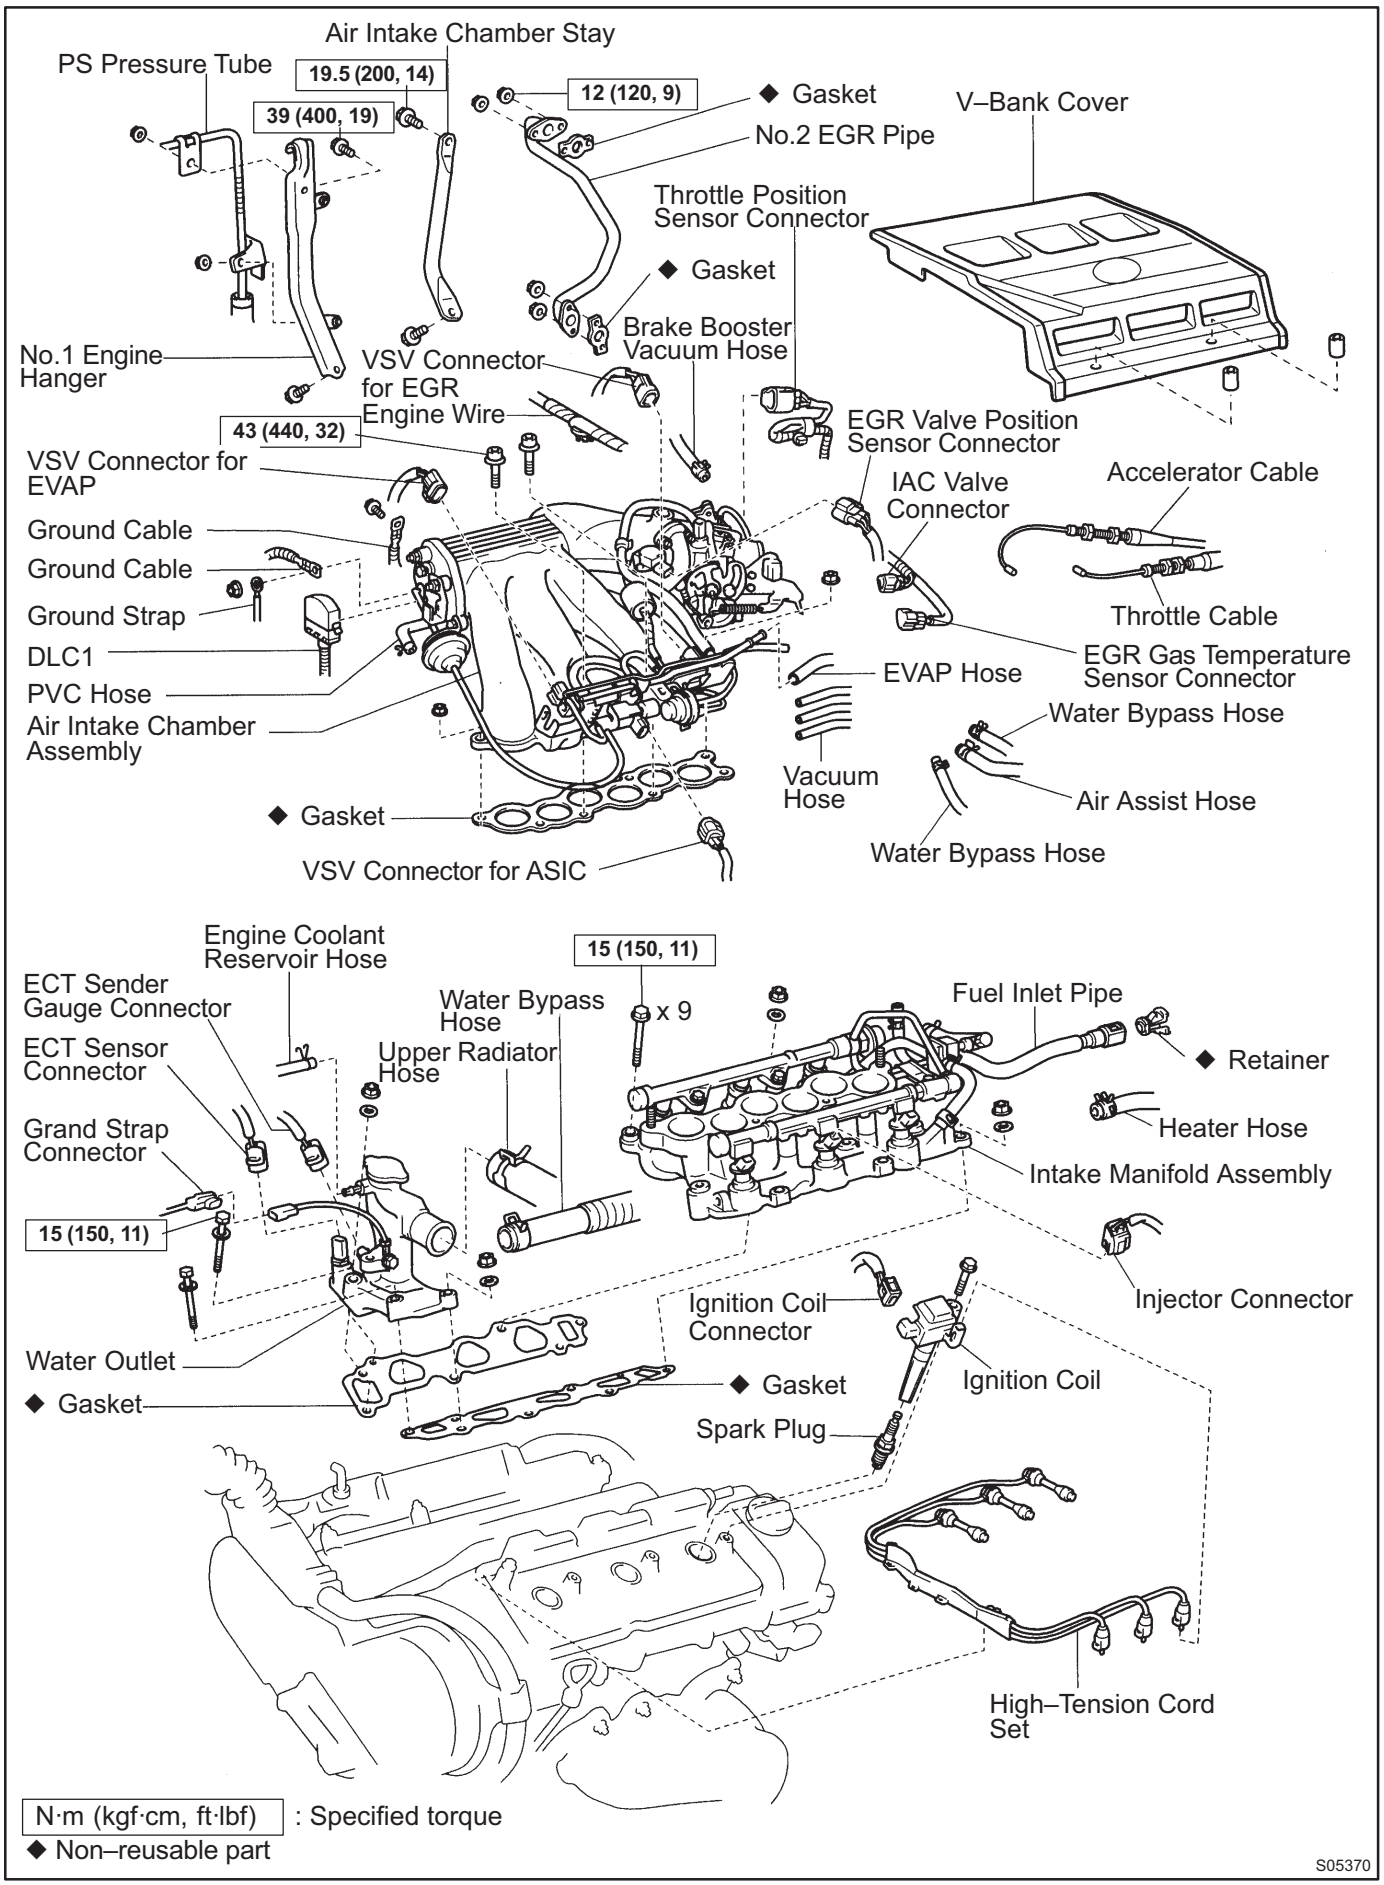
Air Intake Chamber Stay
PS Pressure Tube
19.5 (200, 14)
39 (400, 19)
12 (120, 9)
◆ Gasket
V–Bank Cover
No.2 EGR Pipe
Throttle Position Sensor Connector
◆ Gasket
Brake Booster Vacuum Hose
No.1 Engine Hanger
VSV Connector for EGR
Engine Wire
43 (440, 32)
EGR Valve Position Sensor Connector
VSV Connector for EVAP
IAC Valve Connector
Accelerator Cable
Ground Cable
Ground Cable
Ground Strap
Throttle Cable
DLC1
EGR Gas Temperature Sensor Connector
PVC Hose
EVAP Hose
Air Intake Chamber Assembly
Water Bypass Hose
Vacuum Hose
Air Assist Hose
◆ Gasket
Water Bypass Hose
VSV Connector for ASIC
Engine Coolant Reservoir Hose
15 (150, 11)
ECT Sender Gauge Connector
Water Bypass Hose
x 9
Fuel Inlet Pipe
ECT Sensor Connector
Upper Radiator Hose
◆ Retainer
Grand Strap Connector
Heater Hose
Intake Manifold Assembly
15 (150, 11)
Injector Connector
Ignition Coil Connector
Water Outlet
◆ Gasket
◆ Gasket
Ignition Coil
Spark Plug
High–Tension Cord Set
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
S05370