DI2LK–02
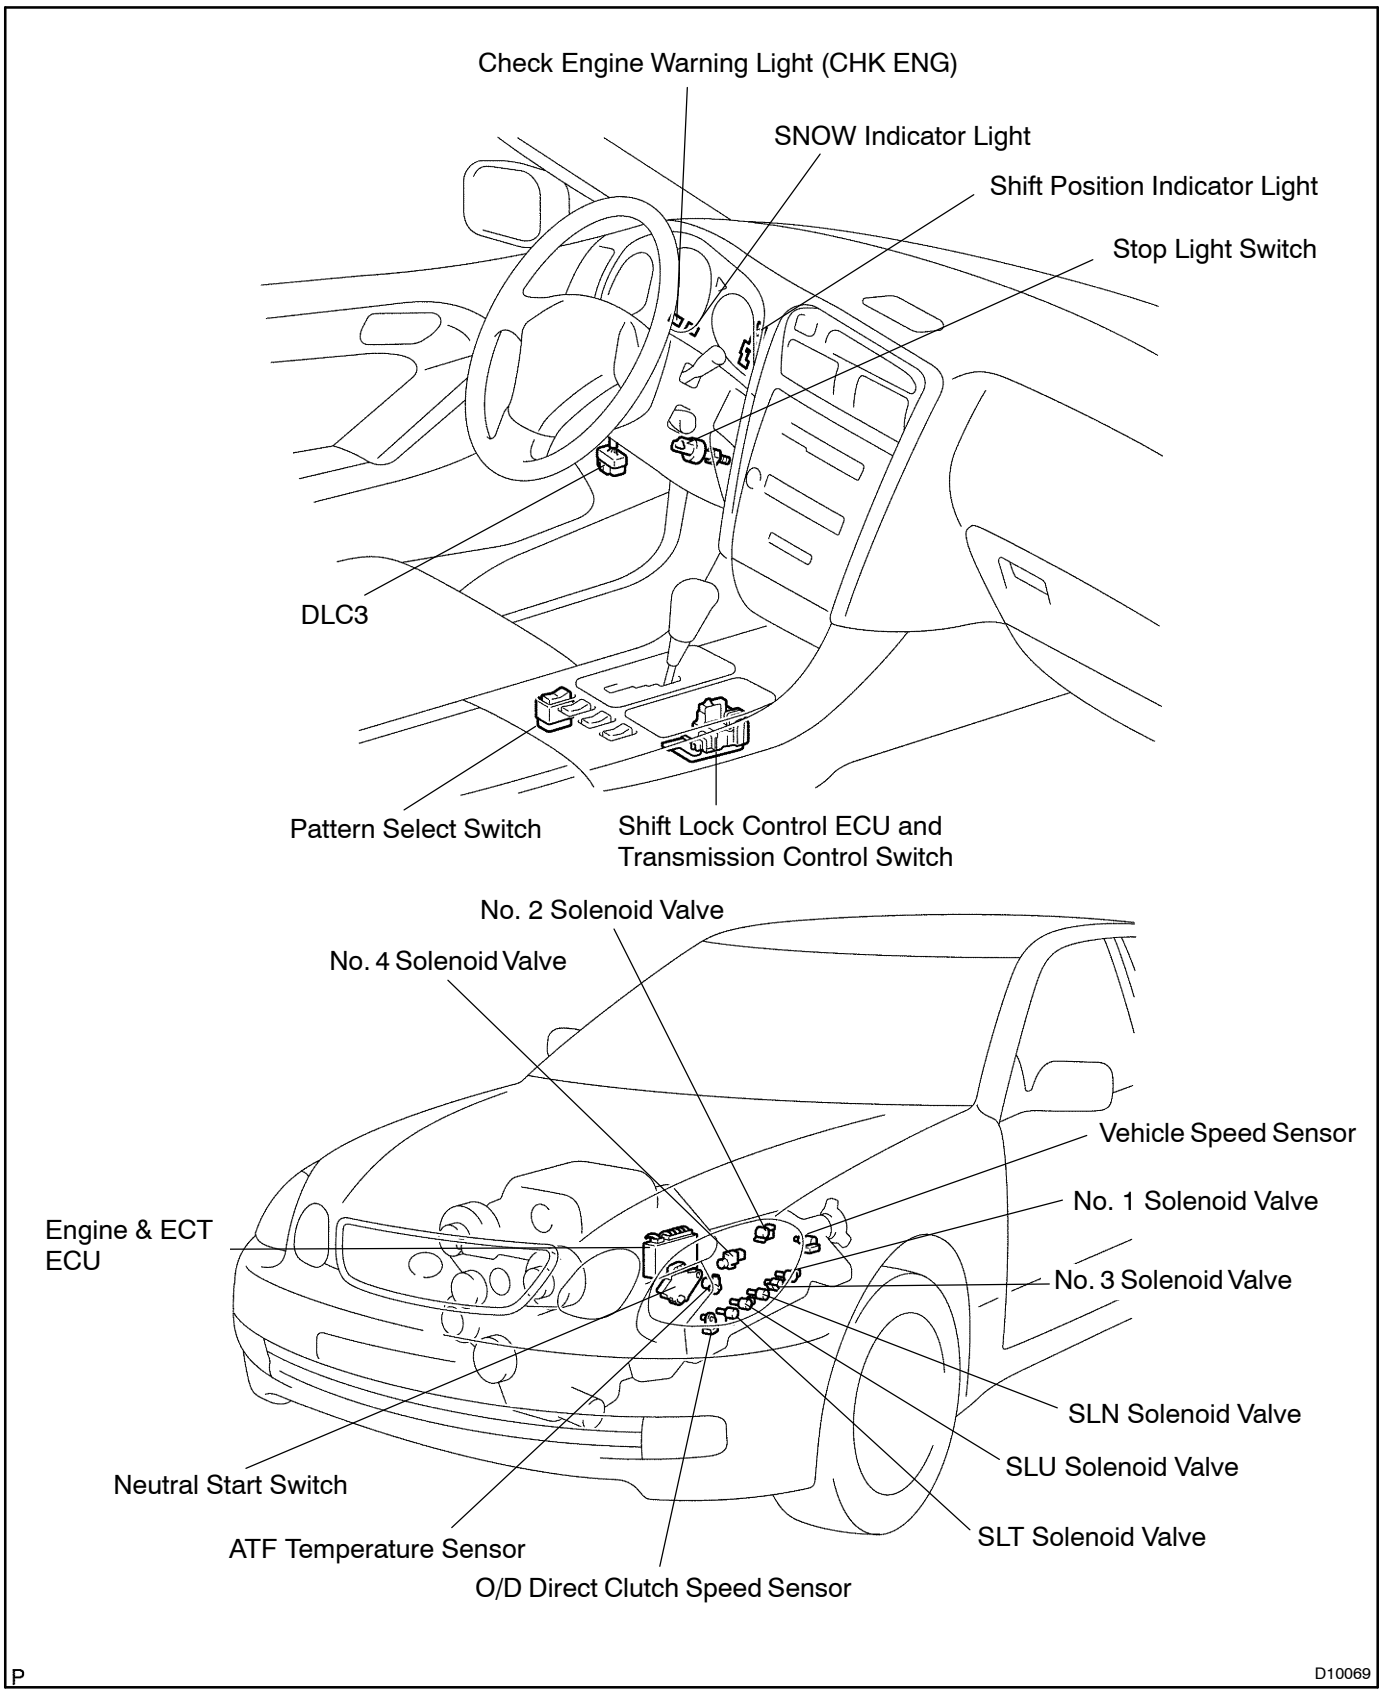
PARTS LOCATION