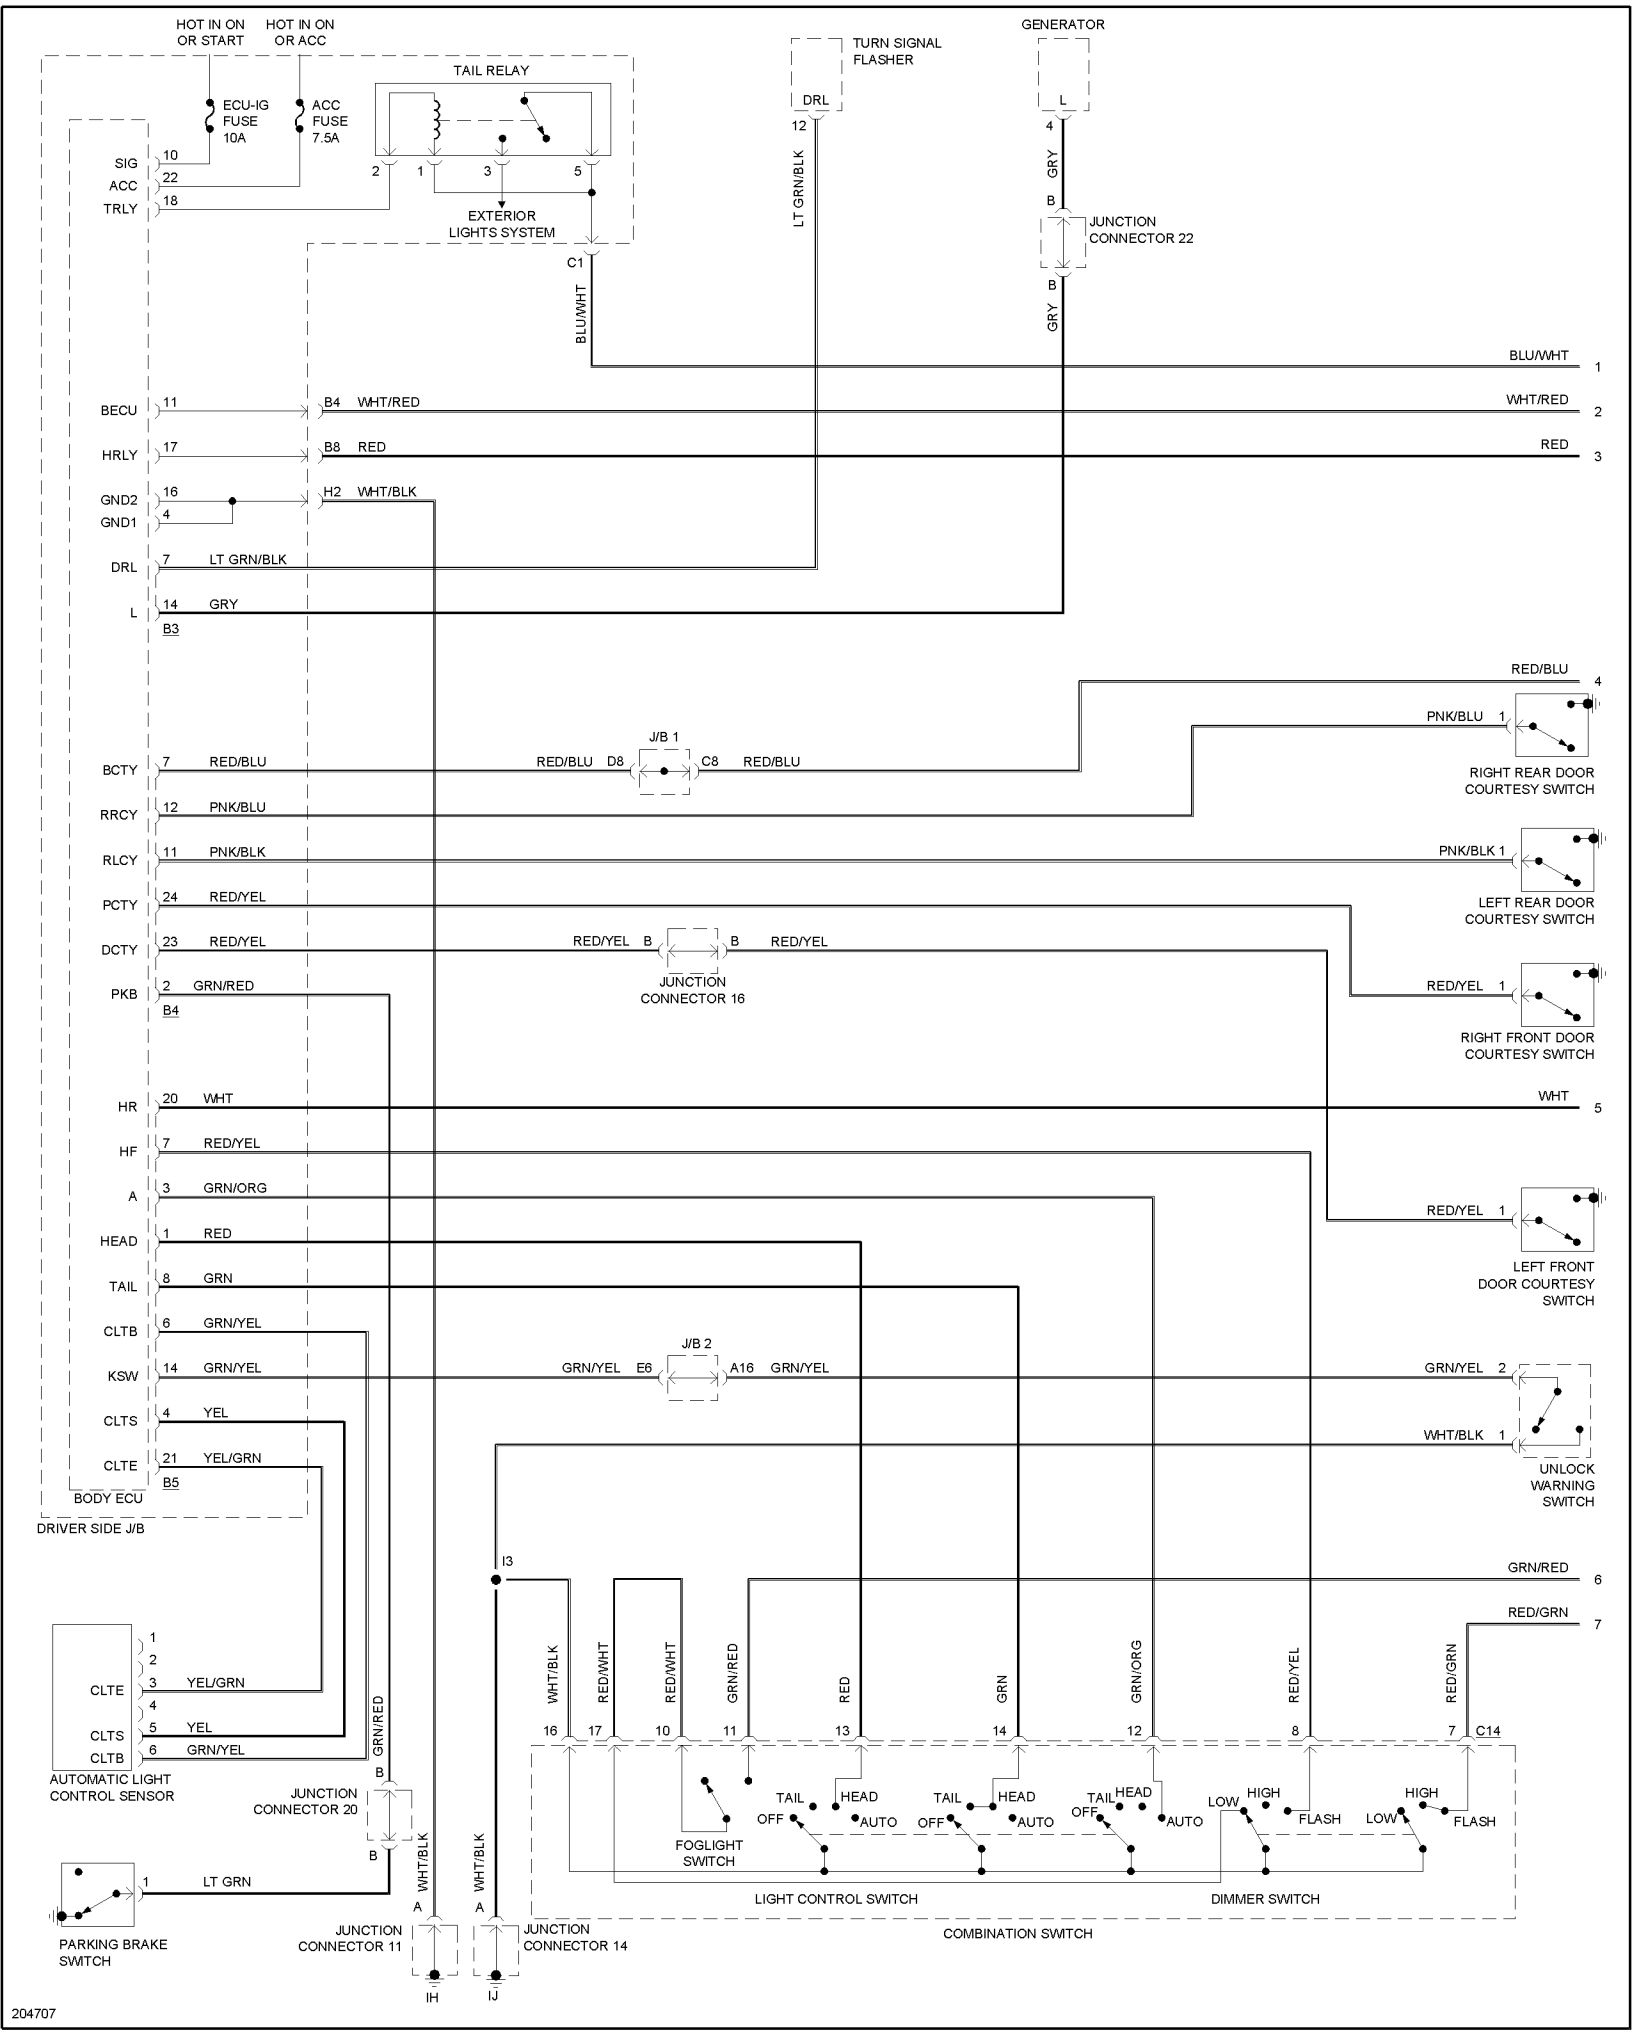
HOT IN ON OR START
HOT IN ON OR ACC
TAIL RELAY
ECU-IG FUSE 10A
ACC FUSE 7.5A
EXTERIOR LIGHTS SYSTEM
TURN SIGNAL FLASHER
GENERATOR
JUNCTION CONNECTOR 22
SIG
ACC
TRLY
BECU
HRLY
GND2
GND1
DRL
L
B3
BCTY
RRCY
RLCY
PCTY
DCTY
PKB
B4
HR
HF
A
HEAD
TAIL
CLTB
KSW
CLTS
CLTE
B5
BODY ECU
DRIVER SIDE J/B
J/B 1
J/B 2
JUNCTION CONNECTOR 16
RIGHT REAR DOOR COURTESY SWITCH
LEFT REAR DOOR COURTESY SWITCH
RIGHT FRONT DOOR COURTESY SWITCH
LEFT FRONT DOOR COURTESY SWITCH
UNLOCK WARNING SWITCH
AUTOMATIC LIGHT CONTROL SENSOR
JUNCTION CONNECTOR 20
PARKING BRAKE SWITCH
JUNCTION CONNECTOR 11
JUNCTION CONNECTOR 14
FOGLIGHT SWITCH
LIGHT CONTROL SWITCH
DIMMER SWITCH
COMBINATION SWITCH
BLU/WHT
WHT/RED
RED
WHT/BLK
LT GRN/BLK
GRY
RED/BLU
PNK/BLU
PNK/BLK
RED/YEL
GRN/RED
WHT
GRN/ORG
GRN
YEL
YEL/GRN
GRN/YEL
LT GRN
RED/GRN
204707