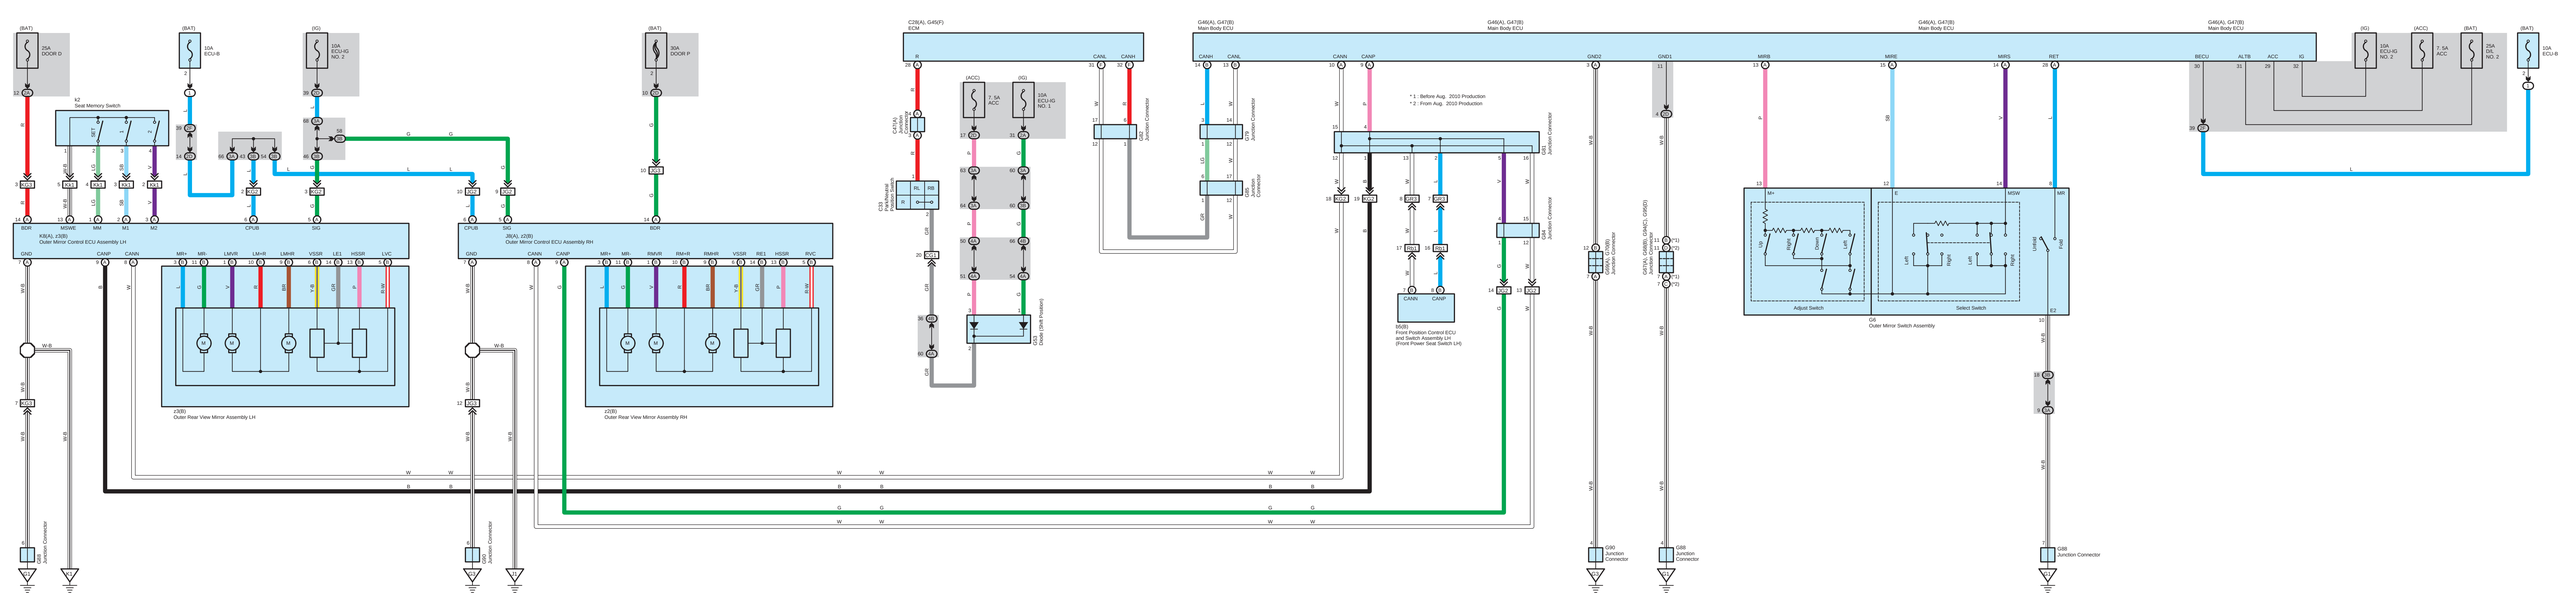
(BAT)
25A DOOR D
(BAT)
15A ECU-B
(IG)
10A ECU-IG NO. 2
(BAT)
30A DOOR P
K2 Seat Memory Switch
SET
M1
M2
BDR
MSWE
MM
CPUB
SIG
H3(A), z2(B) Outer Mirror Control ECU Assembly LH
J3(A), z2(B) Outer Mirror Control ECU Assembly RH
GND
CANP
CANN
MRH
MR
LMHR
LMHR
LMHR
VDSR
LE1
HDSR
LVC
PMHR
PMHR
PMHR
VDSR
RE1
HDSR
RVC
z2(B) Outer Rear View Mirror Assembly LH
z2(B) Outer Rear View Mirror Assembly RH
G30 Junction Connector
G80 Junction Connector
C28(A), G45(F) ECM
C43(A) Junction Connector
C33 Parkbrake Switch Assembly
RL
RB
R
C2 Diode (Shift Position)
(ACC)
7.5A ACC
(IG)
10A ECU-IG NO. 1
CANH
CANL
C22 Junction Connector
G46(A), G47(B) Main Body ECU
C23 Junction Connector
C24 Junction Connector
* 1 : Before Aug. 2010 Production
* 2 : From Aug. 2010 Production
C21 Junction Connector
B5(B) Front Position Control ECU and Switch Assembly LH (Front Power Seat Switch LH)
GND2
GND1
G90 Junction Connector
G91 Junction Connector
MRB
MRE
RET
G5(A), z2(B), G4(C), G5(D) Outer Mirror Switch Assembly
M+
Up
Right
Down
Left
Adjust Switch
E
MSW
MR
Left
Right
Left
Down
Up
Select Switch
LIGHT
Fold
E2
G4 Outer Mirror Switch Assembly
G88 Junction Connector
BECU
ALTB
ACC
IG
(IG)
10A ECU-IG NO. 2
(ACC)
7.5A ACC
(BAT)
25A DR NO. 2
(BAT)
15A ECU-B