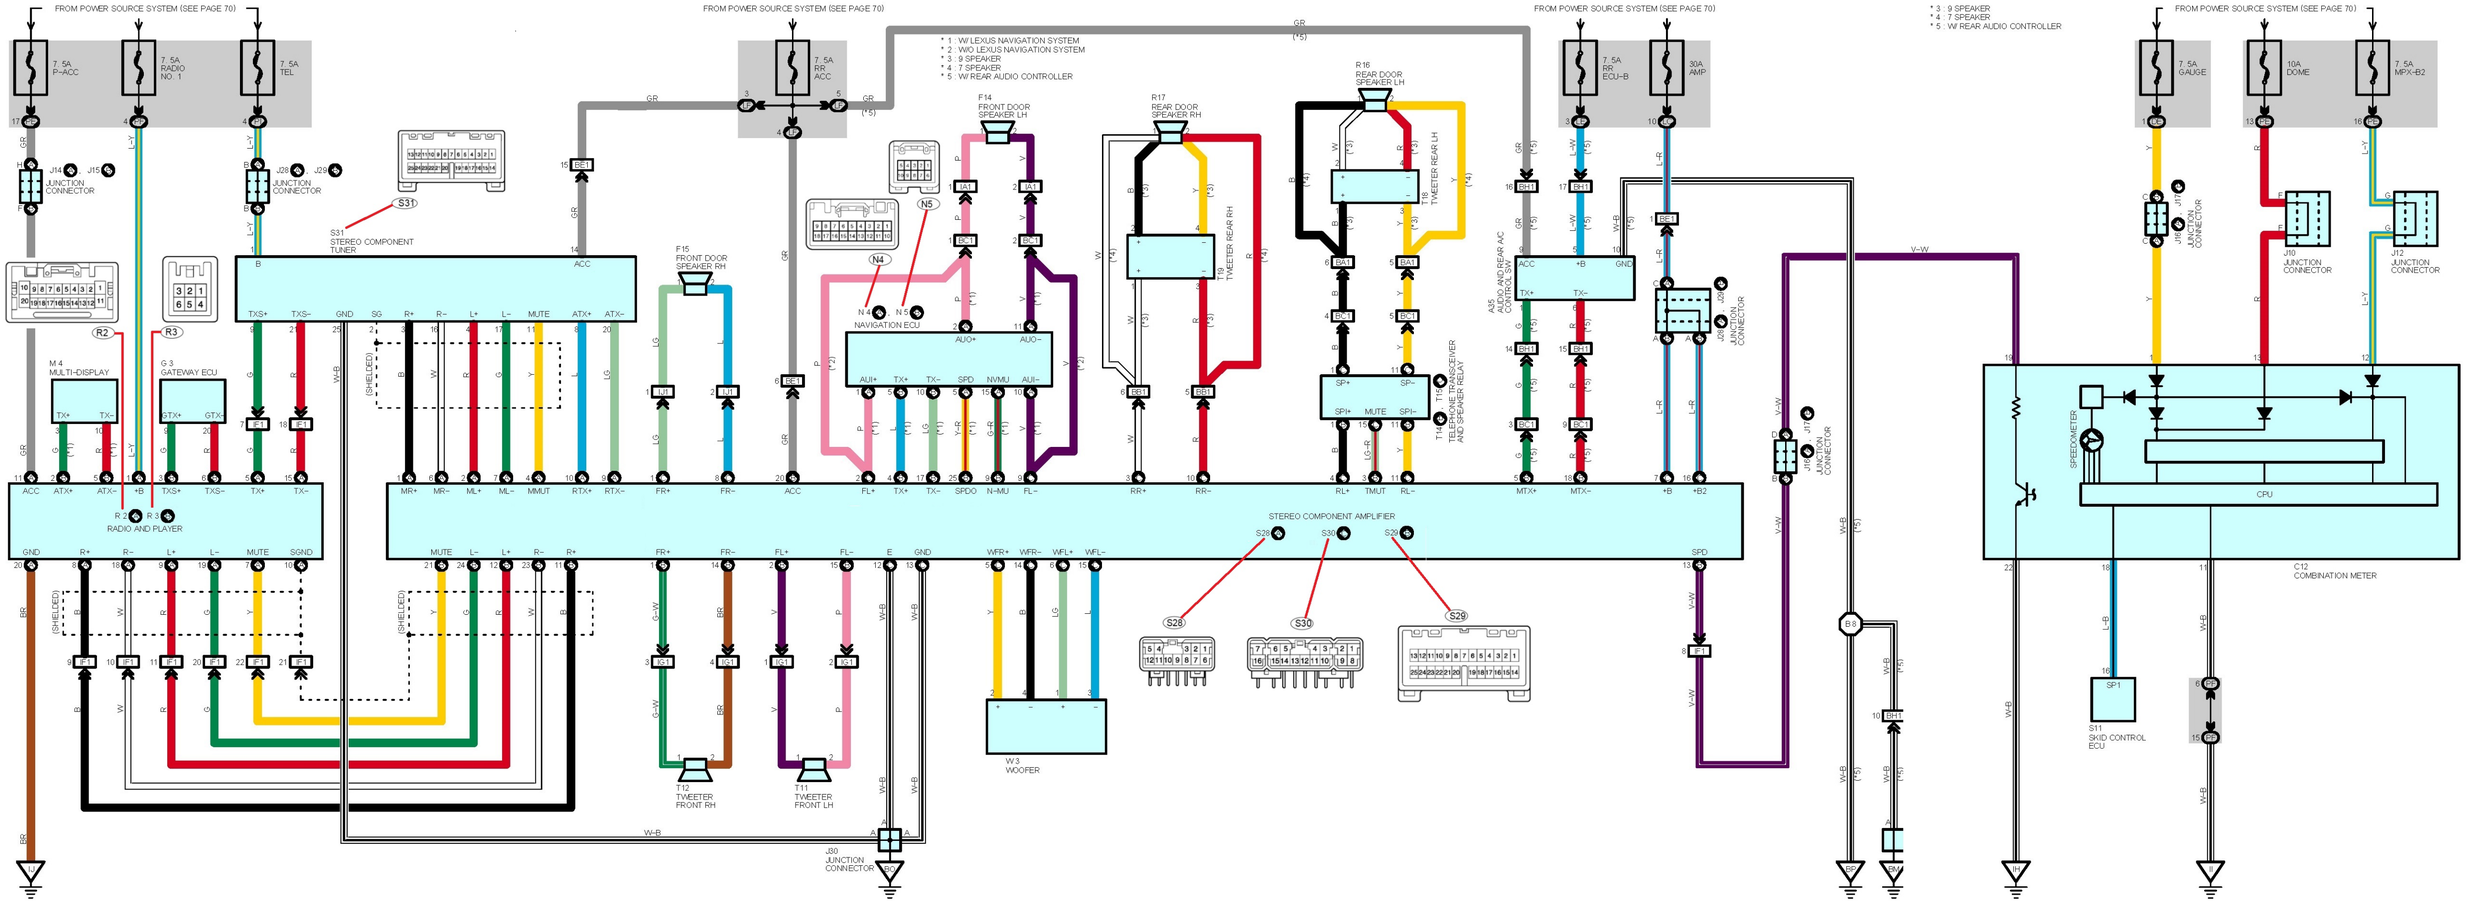
FROM POWER SOURCE SYSTEM (SEE PAGE 70)
7.5A P-ACC
7.5A RADIO NO. 1
7.5A TEL
7.5A RR ACC
7.5A RR ECU-B
30A AMP
7.5A GAUGE
10A DOME
7.5A MPX-B2
* 1 : W/ LEXUS NAVIGATION SYSTEM
* 2 : W/O LEXUS NAVIGATION SYSTEM
* 3 : 9 SPEAKER
* 4 : 7 SPEAKER
* 5 : W/ REAR AUDIO CONTROLLER
J/C JUNCTION CONNECTOR
S31 STEREO COMPONENT TUNER
M 4 MULTI-DISPLAY
G 3 GATEWAY ECU
R2 R3 RADIO AND PLAYER
F14 FRONT DOOR SPEAKER LH
F15 FRONT DOOR SPEAKER RH
R16 REAR DOOR SPEAKER LH
R17 REAR DOOR SPEAKER RH
T18 TWEETER REAR LH
T19 TWEETER REAR RH
N4 N5 NAVIGATION ECU
A35 AUDIO AND REAR AC CONTROL SW
T14 TYPE TRANSCEIVER AND SPEAKER RELAY
STEREO COMPONENT AMPLIFIER
S28 S30 S29
W3 WOOFER
T12 TWEETER FRONT RH
T11 TWEETER FRONT LH
J80 JUNCTION CONNECTOR
C12 COMBINATION METER
SPEEDOMETER
CPU
S11 SKID CONTROL ECU
* 3 : 9 SPEAKER
* 4 : 7 SPEAKER
* 5 : W/ REAR AUDIO CONTROLLER