STEERING COLUMN

COMPONENTS

5001U–01

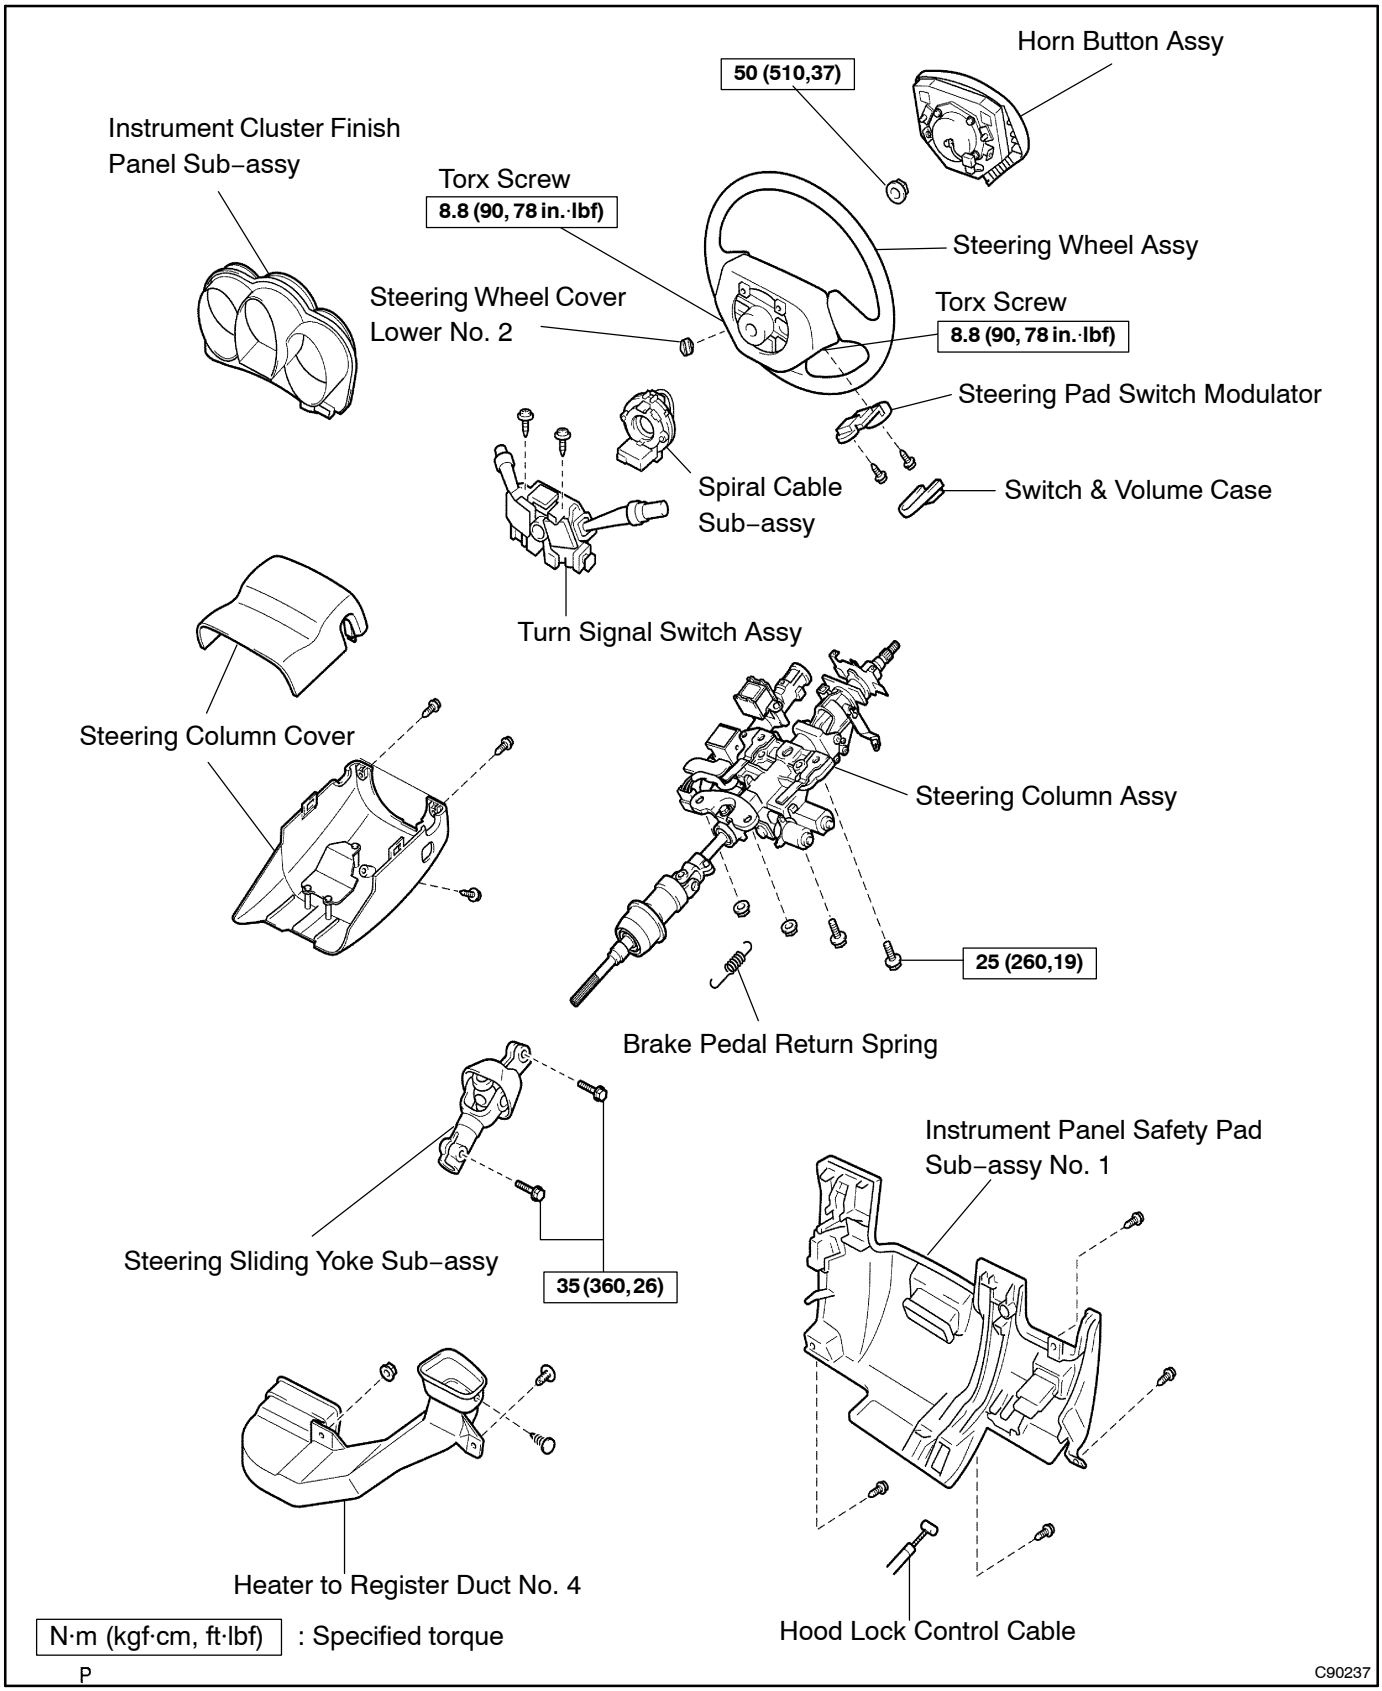

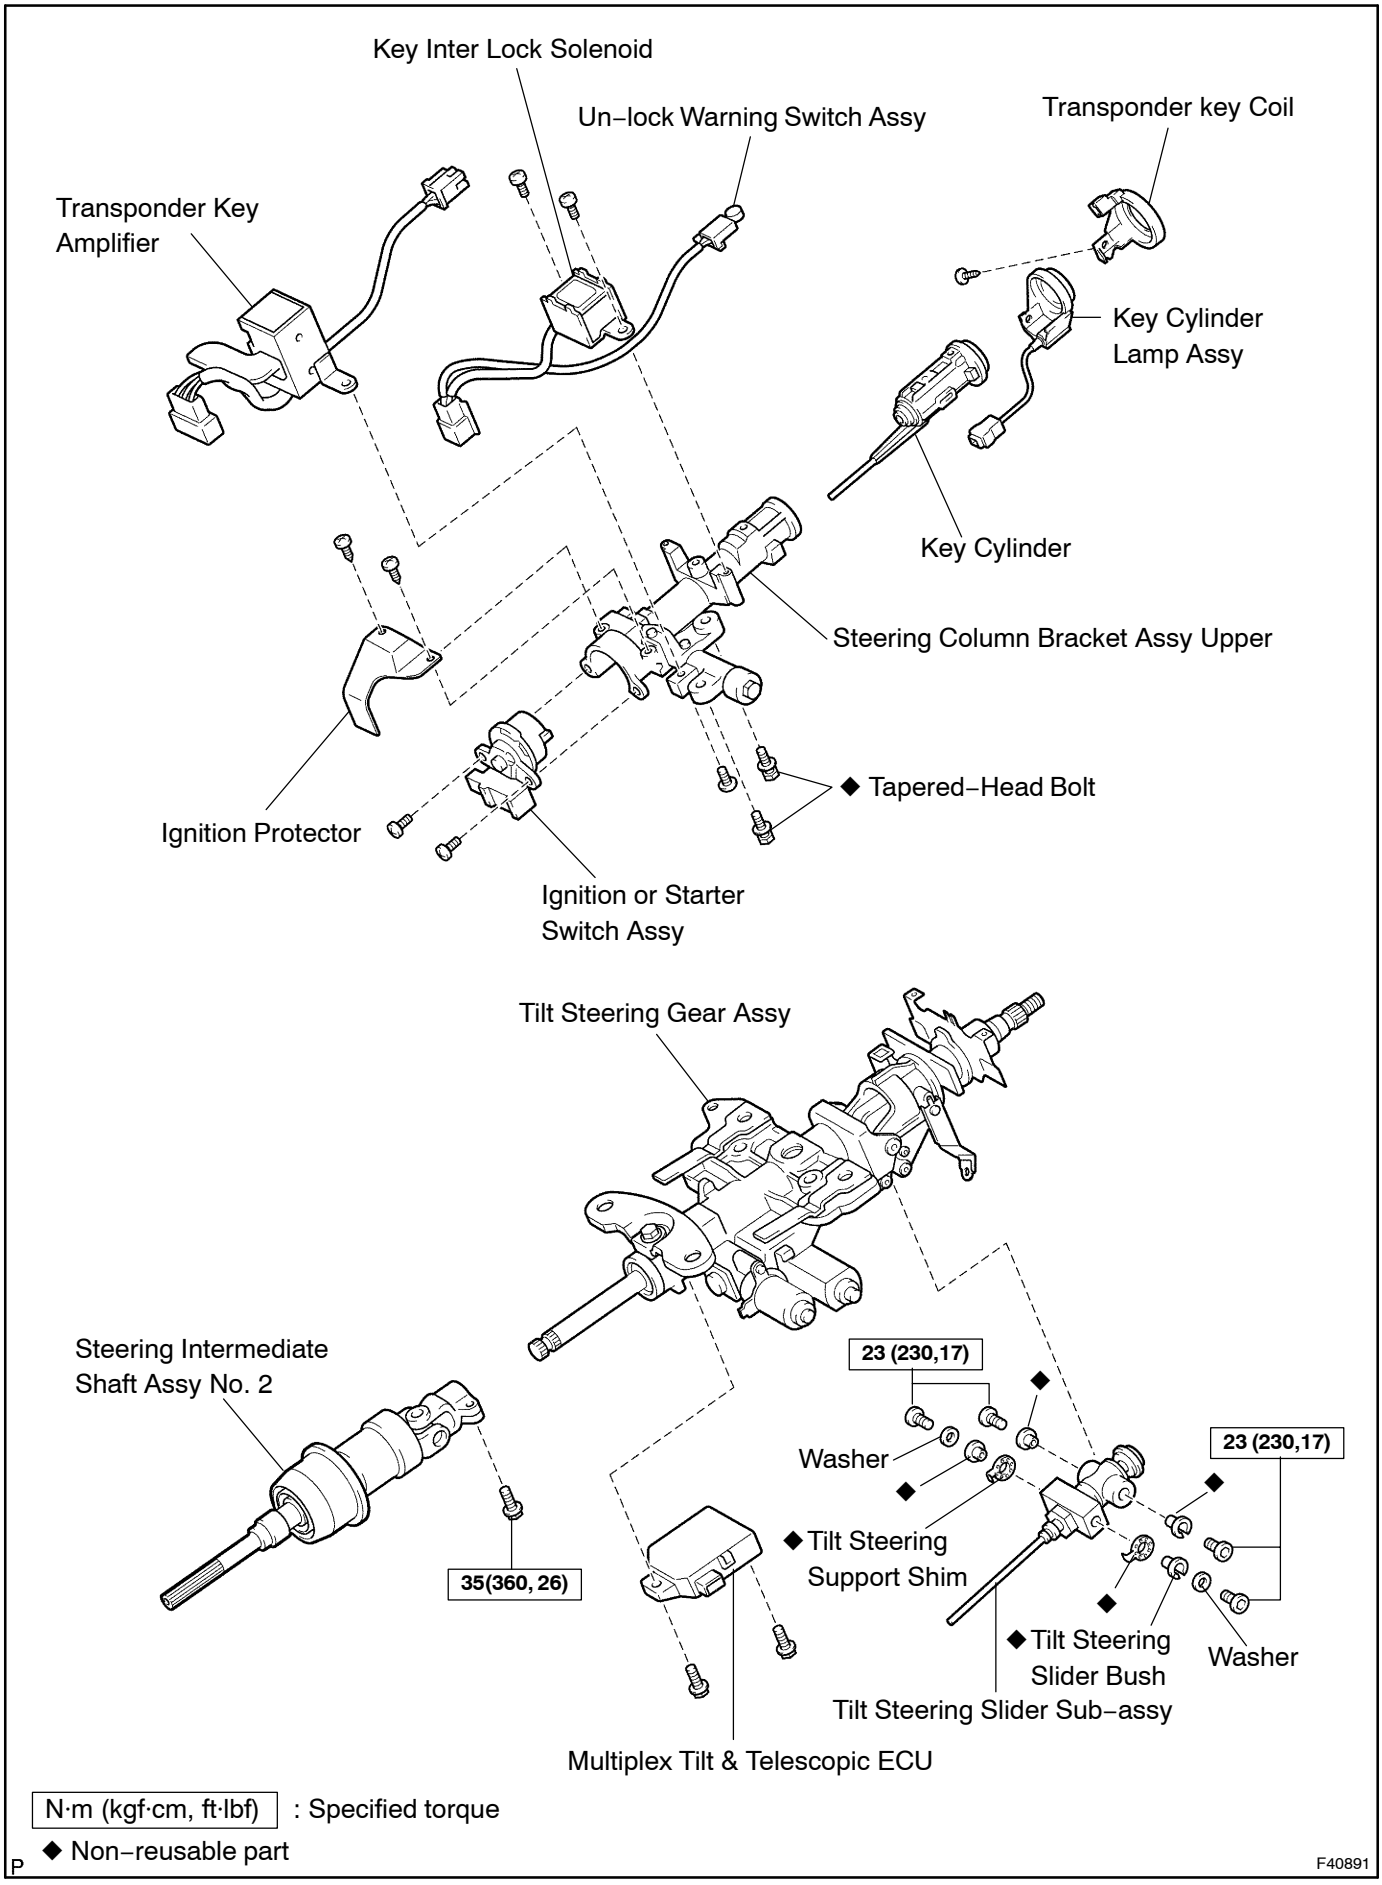
Key Inter Lock Solenoid
Un–lock Warning Switch Assy
Transponder key Coil
Transponder Key Amplifier
Key Cylinder Lamp Assy
Key Cylinder
Steering Column Bracket Assy Upper
◆ Tapered–Head Bolt
Ignition Protector
Ignition or Starter Switch Assy
Tilt Steering Gear Assy
Steering Intermediate Shaft Assy No. 2
23 (230,17)
Washer
23 (230,17)
◆ Tilt Steering Support Shim
35(360, 26)
◆ Tilt Steering Slider Bush
Washer
Tilt Steering Slider Sub–assy
Multiplex Tilt & Telescopic ECU
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
F40891