

- (h) Remove rear wheels.
- (i) Lower rear no. 2 suspension arm. (Fig 1-3)
  - (1) Loosen nut A.

NOTE: Do not remove the nut.

- (2) Remove bolt B and the nut. Disconnect the stabilizer link assembly and height control sensor link bracket from the rear No. 2 suspension arm assembly. Note position of height control sensor link.

- (3) Remove bolt C, nut, and rear shock absorber.


NOTE: Turn the bolt while holding the nut.

- (4) Remove bolt D and the nut on the axle carrier side and lower the rear No. 2 suspension arm assembly from the knuckle assy.

NOTE: Turn the bolt while holding the nut.

- (j) Remove rear shock absorber assembly.

- (1) Remove the 3 nuts on the upper side of the rear shock absorber assembly. (Fig 1-4)

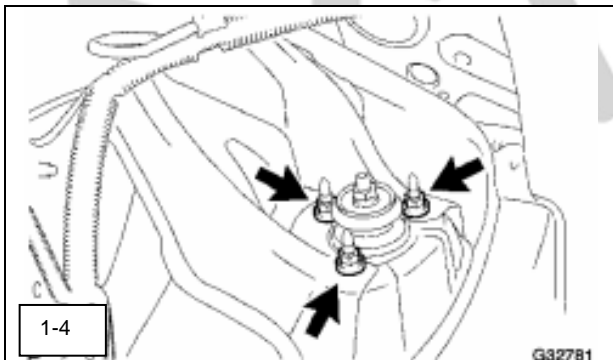

- (2) Remove the 2 bolts and the rear shock absorber assembly from the body. (Fig 1-5)

- (1) You will need to remove two fender liner nuts to get access to these two bolts.

