


INSTALLATION

1. INSTALL OUTSIDE REAR VIEW MIRROR

Install the outside rear view mirror with the 3 bolts, then connect the connector.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

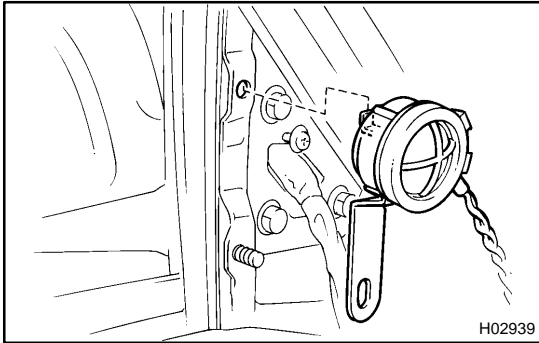


2. INSTALL TWEETER SPEAKER

- (a) Connect the claw and set the tweeter speaker to the door.
- (b) Connect the connector.


3. INSTALL DOOR FRAME GARNISH

Install the door frame garnish with the nut.

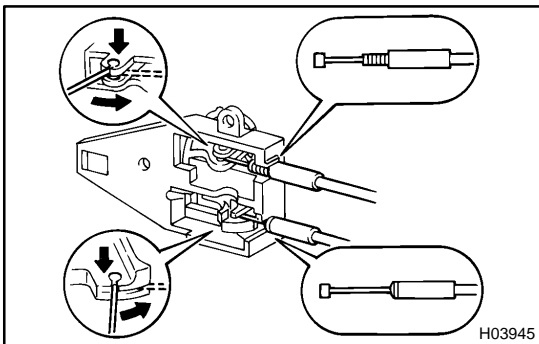

4. INSTALL DOOR TRIM

- (a) Connect the connectors.
- (b) Install the 2 cables to the door inside handle.

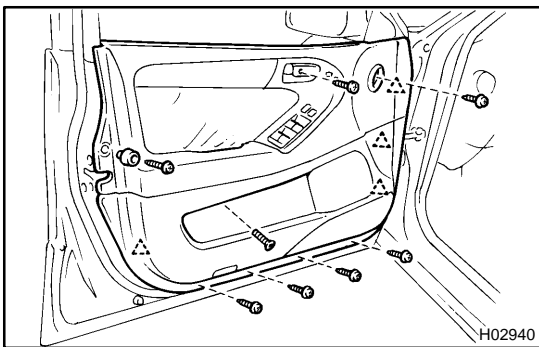

- (c) Install the door trim with the 8 screws.

5. INSTALL DOOR INSIDE HANDLE BEZEL COVER