


## REMOVAL

### 1. REMOVE DOOR INSIDE HANDLE BEZEL COVER

Using a screwdriver, pry upward the door inside handle bezel cover.

HINT:

Tape the screwdriver tip before use.

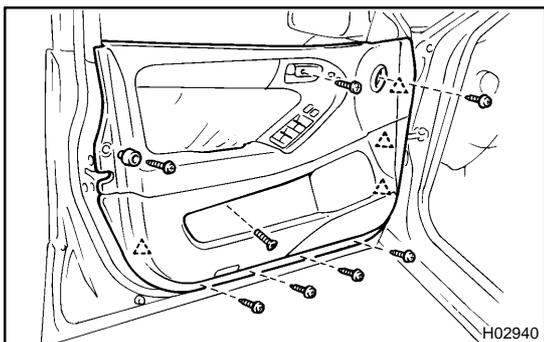


### 2. REMOVE DOOR TRIM

(a) Remove the 8 screws.

(b) Using a screwdriver, remove the door trim by pulling the whole trim up.


HINT:

Tape the screwdriver tip before use.

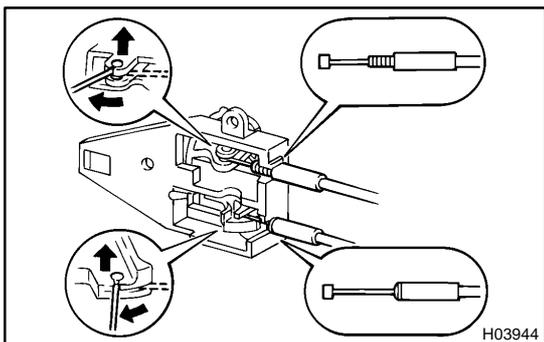

(c) Remove the 2 cables from the door inside handle.

(d) Disconnect the connector.

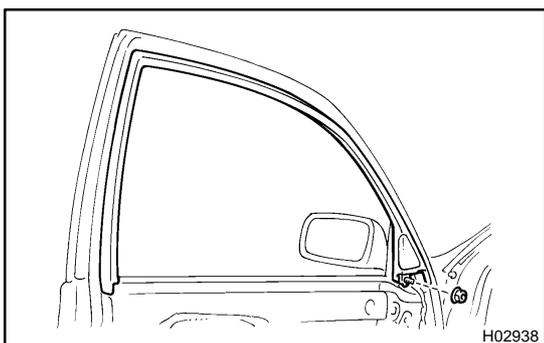

### 3. REMOVE DOOR FRAME GARNISH

Remove the nut and door frame garnish.

### 4. REMOVE TWEETER SPEAKER

Disconnect the connector and remove the tweeter speaker.

### 5. REMOVE OUTSIDE REAR VIEW MIRROR

Disconnect the connector, then remove the 3 bolts and outside rear view mirror.