


BACK-UP LAMP LENS & BODY LH

REPLACEMENT


650P9-02

1. REMOVE BACK DOOR GARNISH CENTER (See page 75-39)
2. REMOVE BACK DOOR SIDE GARNISH RH (See page 75-39)
3. REMOVE BACK DOOR SIDE GARNISH LH (See page 75-39)
4. REMOVE TOOL BOX PANEL SUB-ASSY UPPER (See page 75-39)
5. REMOVE DOOR PULL HANDLE SUB-ASSY (See page 75-39)
6. REMOVE BACK DOOR TRIM BOARD (See page 75-39)
7. REMOVE BACK DOOR SERVICE HOLE COVER (See page 75-39)
8. REMOVE LICENSE REAR LAMP COVER (See page 76-34)

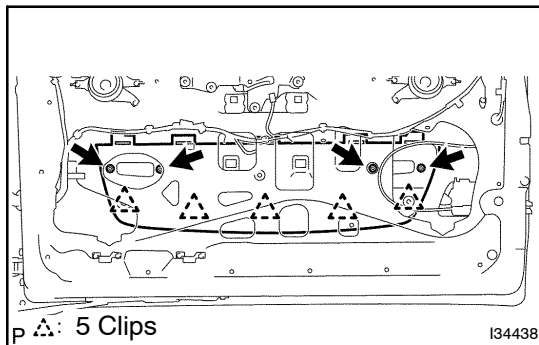

9. REMOVE BACK DOOR OUTSIDE GARNISH

- (a) Disconnect the connectors.
- (b) Remove the 4 nuts.
- (c) Release the 5 clips, and remove the back door outside garnish.

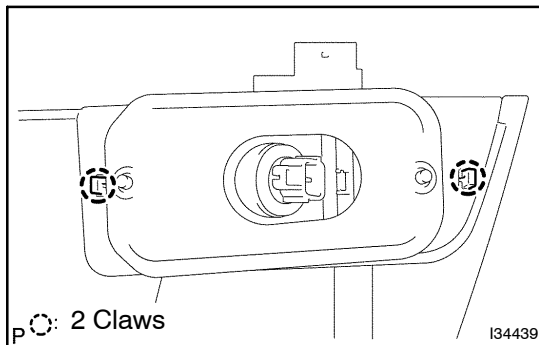

10. REMOVE BACK-UP LAMP LENS & BODY LH

- (a) Remove the back up lamp body gasket LH.
- (b) Remove the socket with the bulb.
- (c) Release the 2 claws and remove the back-up lamp lens & body LH.