

Service

Category Brake

Section

Brake System

Market USA



Applicability

ADDITIONAL INFORMATION

Introduction

2015 RC F vehicles are equipped with high-friction brake pads, specifically designed for superior braking performance and response. As a result, the brakes may exhibit a squeal or squeak type noise.

For customers who find these characteristics objectionable, brake pads with alternative material are now available as service parts.

NOTE

Any changes made to the brake pad material, may result in altered and possibly reduced braking performance and/or feeling under certain driving conditions, including track use.

SERVICE MANAGER NOTE

Please note disclosures stated in the RC F sales information both in print form and online and discuss with the customer prior to installing the alternate brake pads listed in this service bulletin. It is an inherent characteristic of materials and design of brake pads used in this high-performance brake system that brake noise/squeal may result.

L-SB-0054-15

Brake Squeal

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
473011	R & R Front Brake Pads	0.5			
473011A	Opposite Side	0.2	04465-0W190	36	83
473061	R & R Rear Brake Pads	0.8	04466-0VV070	30	03
473061A	Opposite Side	0.1			

APPLICABLE WARRANTY

- This repair is covered under the Lexus Basic Warranty. This warranty is in effect for 48 months or 50,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

Parts Information

PART N	IUMBER	PART NAME	QTY
PREVIOUS	NEW	PART NAIME	
04465-0W190	04465-0W200	Pad Kit, Disc Brake L/Fitting Parts, FR	1
04466-0W070	04466-0W080	Pad Kit, Disc Brake L/Fitting Parts, RR	1

Required Tools & Equipment

SPECIAL SERVICETOOLS (SST)	PART NUMBER	QTY
Spreader, Disc Brake Piston Wide Type*	09719-77020	1
Spreader, Disc Brake Piston Wide Type*	09719-77010	1

^{*} SST will be available through BOSCH upon dealer request/purchase.

NOTE

Additional SSTs may be ordered by calling 1-800-933-8335.



Installation Procedure


- Remove and replace the front and rear brake pads with the alternative parts.
 Refer to the Technical Information System (TIS), applicable model and model year Repair Manual:
 - 2015 RC F:
 Brake Brake (Front) "Brake (Front): Front Disc Brake Pad: Replacement"
 - 2015 RC F: Brake – Brake (Rear) – "Brake (Rear): Rear Disc Brake Pad: Replacement"

NOTICE

When performing this procedure, the front and rear brake pads must be replaced together to ensure proper brake system operation.

NOTE

When installing the front brake pads, ensure the single slit pad is installed on the inboard side of the calipers.

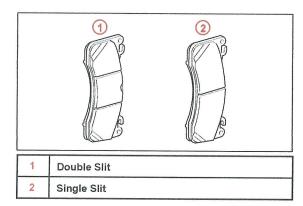

2. Road test the vehicle to confirm proper brake pad installation.



Brembo® Brake Disclosure Reference:


Online

http://www.lexus.com/models/RCF/features



STOPPING POWER

Reining back such a highperformance machine lap after lap requires serious stopping power. Get the control you crave, thanks to the huge 14.9-inch front brake rotors clamped by massive six-piston aluminum monoblock Brembo® calipers.3 Featuring a fast-cooling, slotted rotor design and high-friction pads³ for reduced brake fade, the RCF makes stopping almost as exciting as going. Almost.

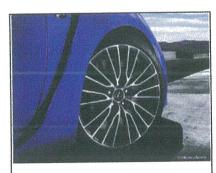

BREMBO® BRAKES

Get the control you crave, thanks to the huge 14.9-inch slotted front brake rotors clamped by massive six-piston Brembo calipers*.

*High-friction brakes require periodic inspection and measurement as outlined in the Warranty and Services Guide. The pads and rotors are expected to experience greater wear than conventional brakes. Pad life may be less than 20,000 miles, and brake rotor life may be less than 50,000 miles depending on driving conditions. F SPORT models may feature Brembo® brakes. It is an inherent characteristic of materials and design of brake pads used in this high-performance brake system that brake noise/squeal may result.

Printed 2015 RC F Brochure

WARRANTY Pour-year/30 000-mile Lexus Limited Wirnanty, Six-year/70 000-mile Powertrain Warranty, Six-year/inimited-mileage Corosion Perforation Warranty, All warrantes with zero deductable. See than FCV Warranty and Services and the control of the



2015 RC F Owners Manual

4-1. Before driving

181

When starting off on an uphill

The hill-start assist control will activate. $(\rightarrow P. 282)$

Driving in the rain

- Drive carefully when it is raining, because visibility will be reduced, the windows may become fogged-up, and the road will be slippery.
- Drive carefully when it starts to rain, because the road surface will be especially slippery.
- Refrain from high speeds when driving on an expressway in the rain, because there may
 be a layer of water between the tires and the road surface, preventing the steering and
 brakes from operating properly.

Engine speed while driving

In the following conditions, the engine speed may become high while driving. This is due to automatic up-shifting control or down-shifting implementation to meet driving conditions. It does not indicate sudden acceleration.

- The vehicle is judged to be driving uphill or downhill
- When the accelerator pedal is released
- When the brake pedal is depressed while sport mode is selected

Restraining the engine output (brake override system)

- When the accelerator and brake pedals are depressed at the same time, the engine output may be restrained.
- A warning message is displayed on the multi-information display while the system is operating. (\$\rightarrow\$P.550)

Breaking in your new Lexus

To extend the life of the vehicle, observing the following precautions is recommended:

- For the first 186 miles (300 km): Avoid sudden stops.
- For the first 621 miles (1000 km):
 - · Do not drive at extremely high speeds.
 - Avoid sudden acceleration.
 - Do not drive continuously in low gears.
 - Do not drive at a constant speed for extended periods.

■ Drum-in-disc type parking brake system

Your vehicle has a drum-in-disc type parking brake system. This type of brake system needs bedding-down of the brake shoes periodically or whenever the parking brake shoes and/or drum are replaced. Have your Lexus dealer perform the bedding down operation.

🎟 Operating your vehicle in a foreign country

Comply with the relevant vehicle registration laws and confirm the availability of the correct fuel. (\rightarrow P. 620)

Brake pads and discs (RCF)

The brake pads and discs are designed for use under high load conditions. Therefore, brake noise may be generated depending on the vehicle speed, braking force and vehicle environment (temperature, humidity, etc.).

RC350/RCF_U (OM24636U)

4

Driving

			₩