
Last Modified: 7-14-2010	6.4 A	From: 201008	
Model Year: 2011	Model: RX350	Doc ID: RM000003MUL00NX	
Title: LIGHTING (INT): PERSONAL LIGHT: REMOVAL (2011 RX350)			

# **REMOVAL**

### 1. REMOVE MAP LIGHT ASSEMBLY


- (a) w/ Holder:
  - (1) Open the holder.
- (b) w/o Holder:

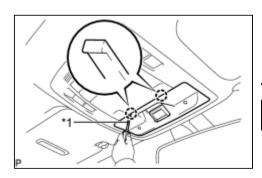

(1) Using a screwdriver wrapped with protective tape, disengage the 2 claws and disconnect the cover.

## **Text in Illustration**


	*1	Protective Tape
--	----	-----------------

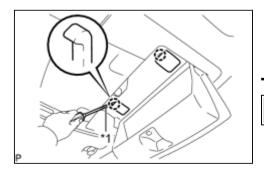

(c) Using a screwdriver wrapped with protective tape, disengage the 2 claws and disconnect the 2 caps.

### **Text in Illustration**


*1	Protective Tape

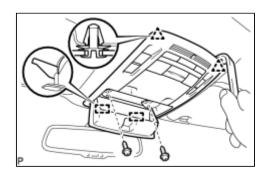

(d) Remove the 2 screws.

- (e) Using a moulding remover, disengage the 2 clips and 2 guides.
- (f) Disconnect each connector and remove the map light assembly.

#### 2. REMOVE MAP LIGHT BULB

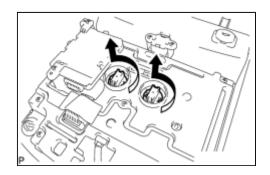

(a) Turn the 2 map light bulbs and 2 map light sockets in the direction indicated by the arrows in the illustration and remove them as a unit.

(b) Remove the 2 map light bulbs from the 2 map light sockets.



