


# PARKING BRAKE CONTROL PEDAL ASSY REPLACEMENT

3302X-01


HINT:

COMPONENTS: [See page 33-3](#)

1. REMOVE DOOR SCUFF PLATE ASSY LH(LHD STEERING POSITION TYPE)
2. REMOVE DOOR SCUFF PLATE ASSY RH(RHD STEERING POSITION TYPE)
3. REMOVE FRONT DOOR OPENING TRIM COVER LH(LHD STEERING POSITION TYPE)
4. REMOVE FRONT DOOR OPENING TRIM COVER RH(RHD STEERING POSITION TYPE)
5. REMOVE INSTRUMENT PANEL SAFETY PAD SUB-ASSY NO.1
6. REMOVE PARKING BRAKE CONTROL PEDAL ASSY
  - (a) Disconnect the parking brake switch connector.
  - (b) Remove the 2 bolts and disconnect the parking brake release cable sub-assy.

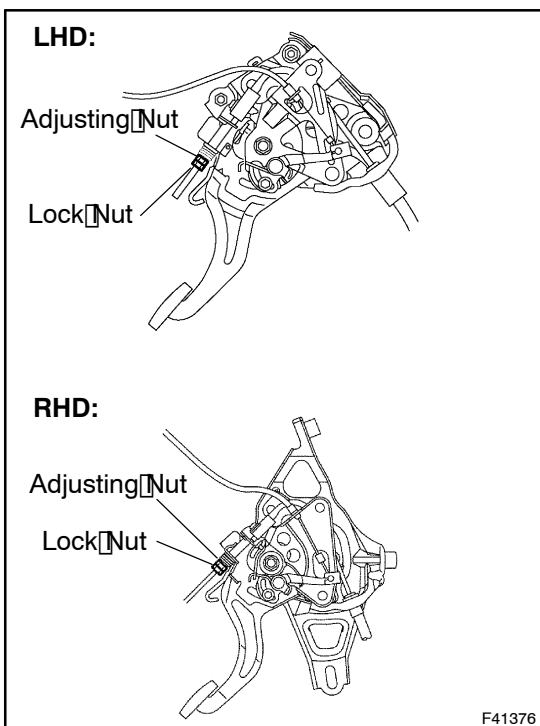

- (c) Remove the lock nut and adjusting nut.
- (d) Remove the clip.

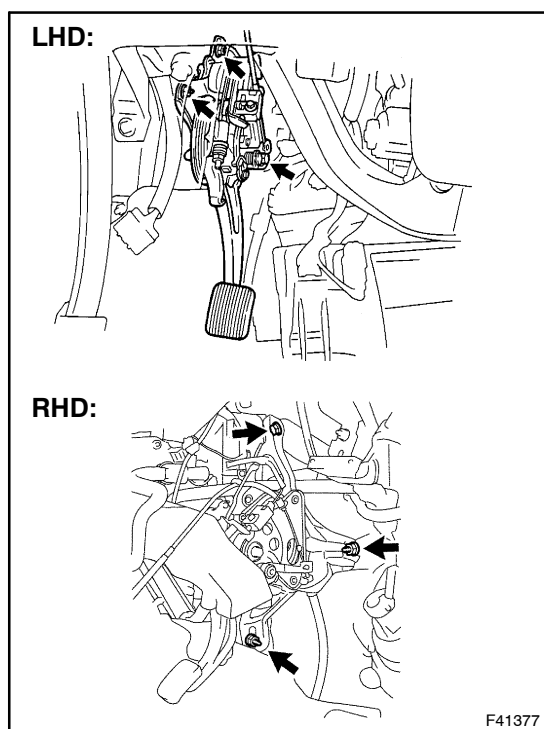

- (e) Remove the bolt and 2 nuts, pull out the parking brake cable and remove the parking brake control pedal assy.

**7. REMOVE PARKING BRAKE RELEASE CABLE SUB-ASSY**

**8. REMOVE PARKING BRAKE SWITCH ASSY**

- (a) Remove the screw and parking brake switch.


**9. REMOVE PARKING PEDAL PAD**

**10. INSTALL PARKING PEDAL PAD**

**11. INSTALL PARKING BRAKE SWITCH ASSY**

- (a) Install parking brake switch and screw.

**12. INSTALL PARKING BRAKE RELEASE CABLE SUB-ASSY**

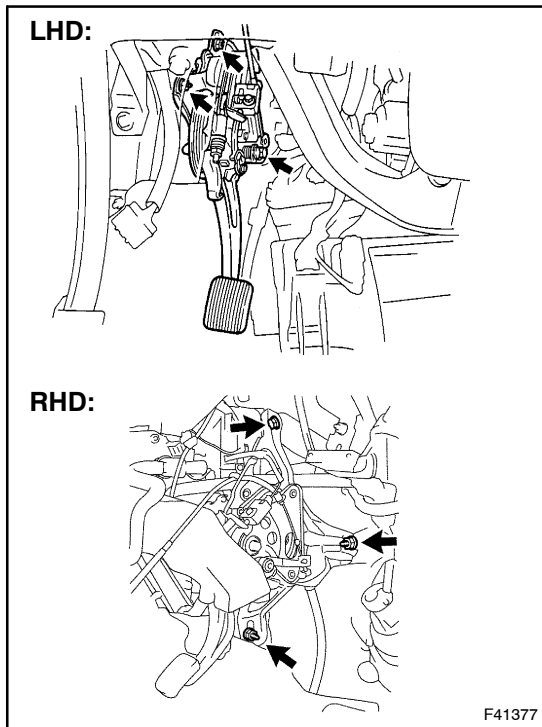**13. INSTALL PARKING BRAKE CONTROL PEDAL ASSY**

- (a) Install the parking brake cable to the parking brake control pedal assy with the bolt and 2 nuts.

**Torque:**

**LHD: 19.1 N·m (195 kgf·cm, 14 ft·lbf)**

**RHD: 12.7 N·m (130 kgf·cm, 9 ft·lbf)**

- (b) Install the clip for the parking brake cable.  
 (c) Temporarily tighten the adjusting nut and lock nut.  
 (d) Install the parking brake release cable with the 2 bolts.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in. lbf)**  
 (e) Connect the parking brake switch connector.

**14. REMOVE REAR WHEEL****15. ADJUST PARKING BRAKE SHOE CLEARANCE (See page 33-17)****16. INSTALL REAR WHEEL**

- (a) Install the rear wheel with the 5 nuts.  
**Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)**  
 (b) Install the ornament with the 10 bolts.  
**Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)**

**17. CHECK PARKING BRAKE PEDAL TRAVEL (See page 33-2)****18. ADJUST PARKING BRAKE PEDAL TRAVEL (See page 33-2)**