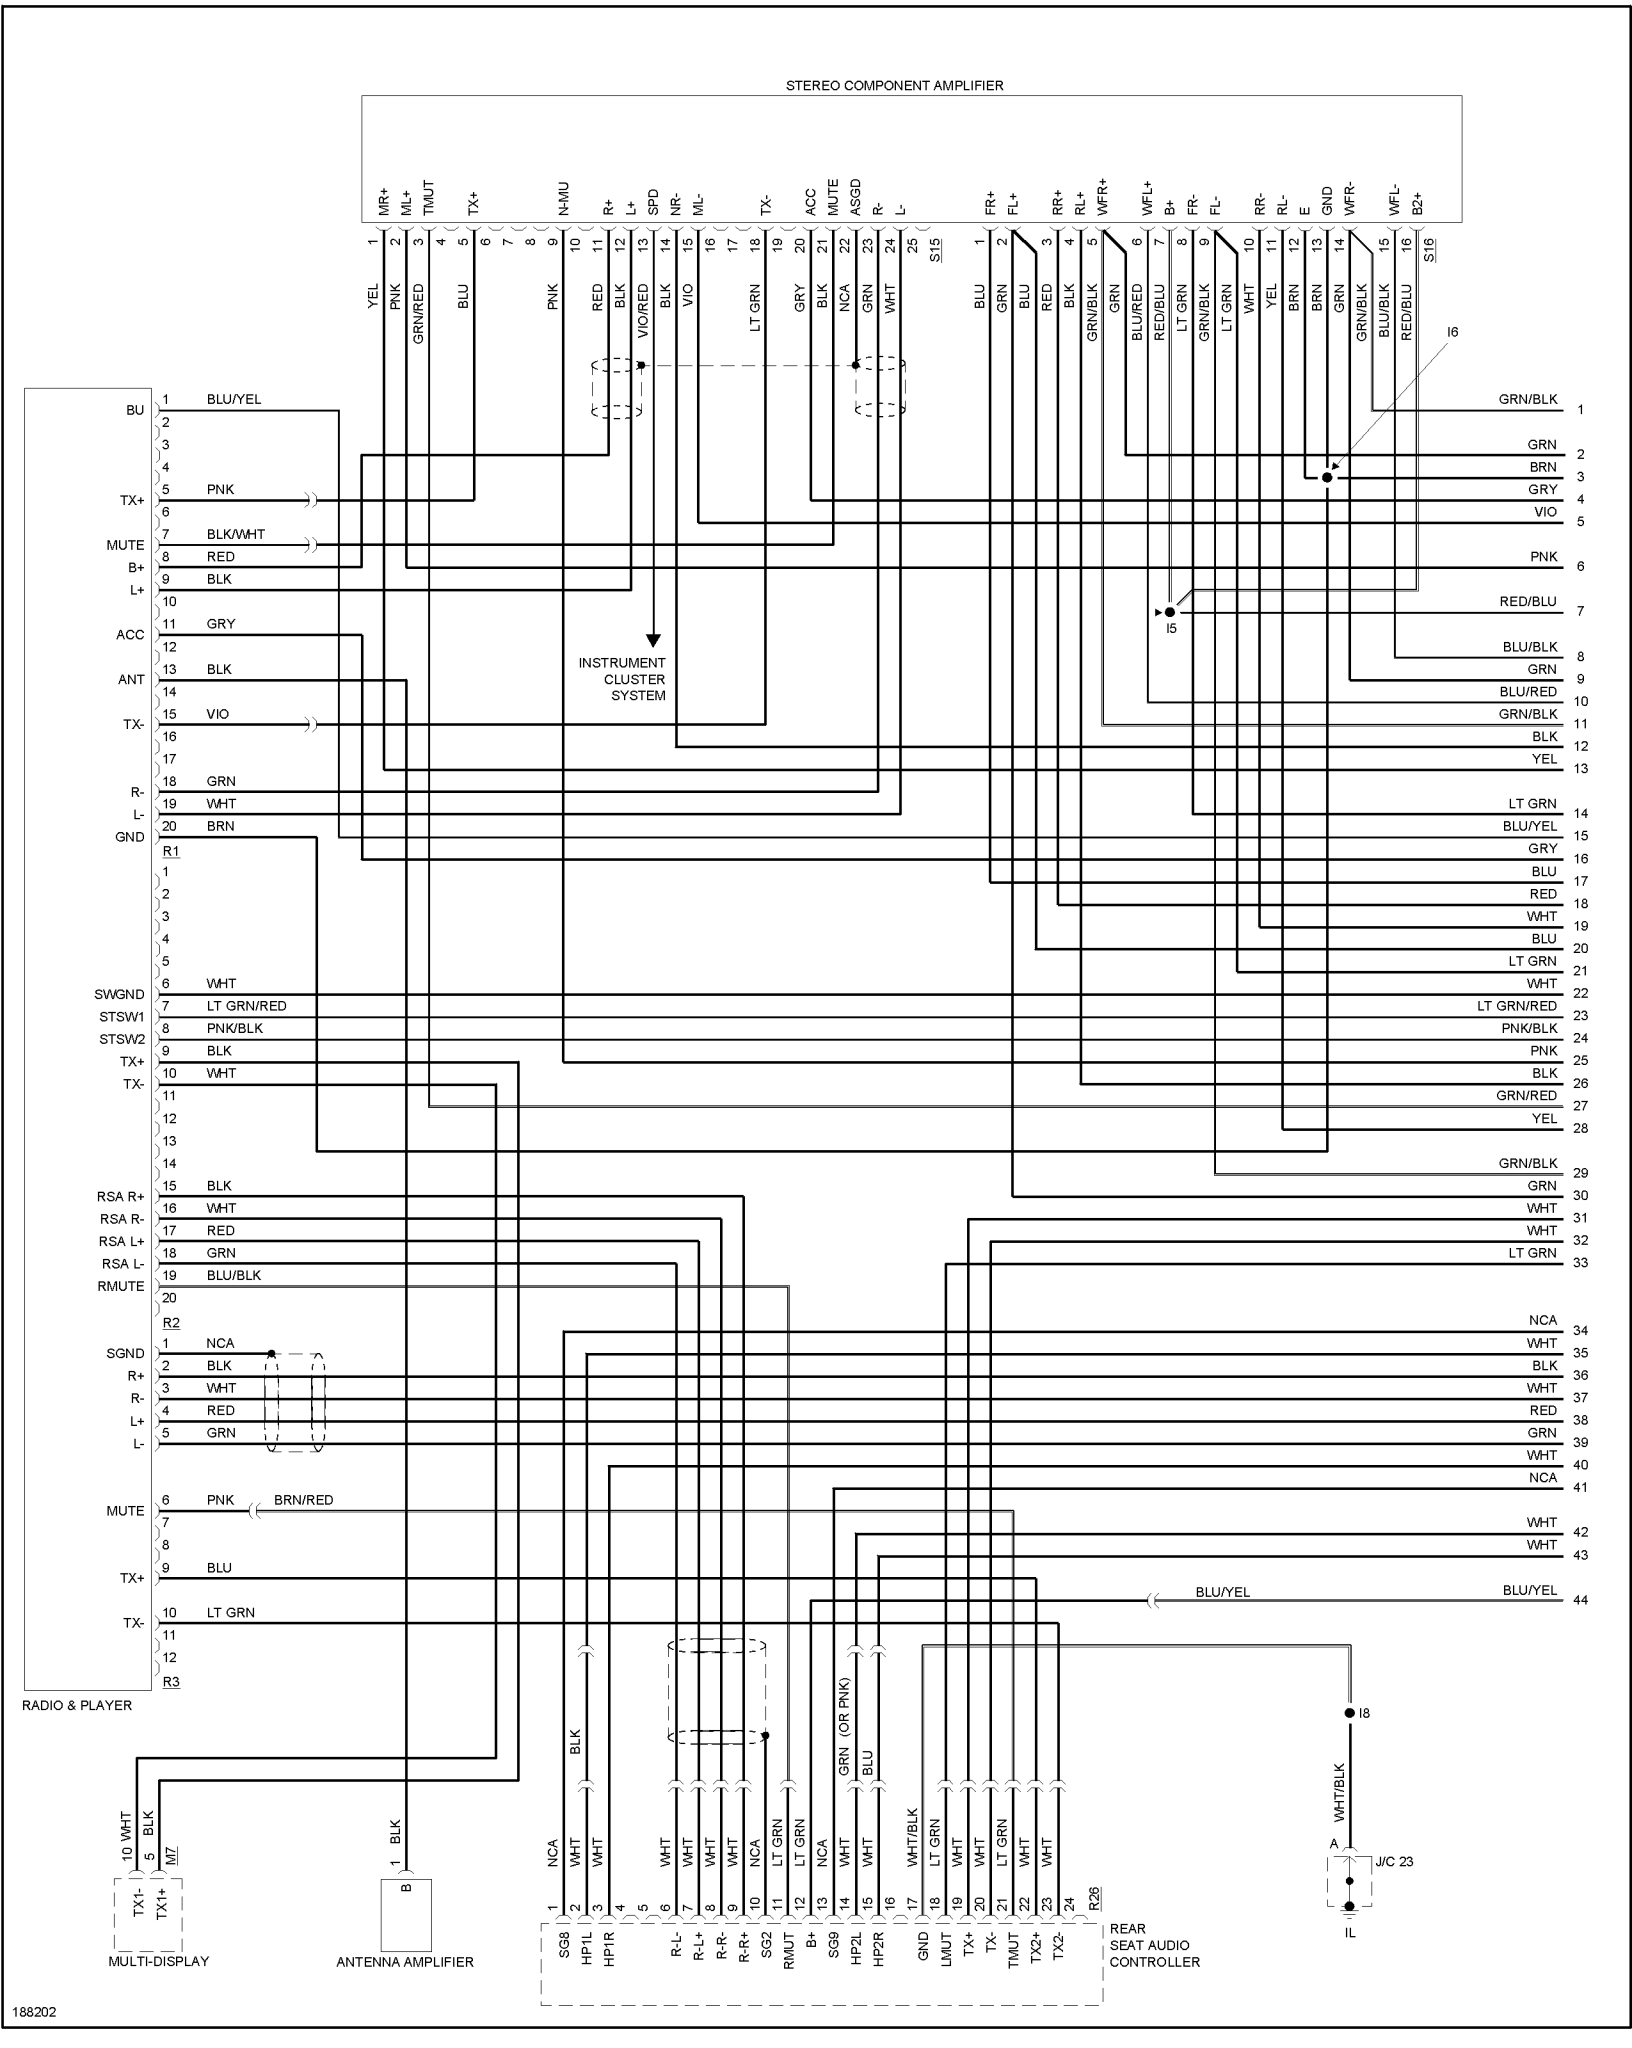
STEREO COMPONENT AMPLIFIER
M/R+ M/L+ TM/UT TX+ N-MU R+ L+ SPD NR- M/L- TX- ACC M/UTE ASGD R- L-
FR+ FL+ RR+ RL+ WFR+ WFL+ B+ FR- FL- RR- RL- E GND WFR- WFL- B2+
S15
S16
YEL PNK GRN/RED BLU PNK RED BLK VIO/RED BLK VIO LT GRN GRY BLK NCA GRN WHT
BLU GRN BLU RED BLK GRN/BLK GRN BLU/RED RED/BLU LT GRN GRN/BLK LT GRN WHT YEL BRN BRN GRN GRN/BLK BLU/BLK RED/BLU
I6
I5
INSTRUMENT CLUSTER SYSTEM
BU
TX+
MUTE
B+
L+
ACC
ANT
TX-
R-
L-
GND
SWGND
STSW1
STSW2
TX+
TX-
RSA R+
RSA R-
RSA L+
RSA L-
RMUTE
SGND
R+
R-
L+
L-
MUTE
TX+
TX-
R1
R2
R3
BLU/YEL
PNK
BLK/WHT
RED
BLK
GRY
BLK
VIO
GRN
WHT
BRN
WHT
LT GRN/RED
PNK/BLK
BLK
WHT
BLK
WHT
RED
GRN
BLU/BLK
NCA
BLK
WHT
RED
GRN
PNK
BRN/RED
BLU
LT GRN
RADIO & PLAYER
GRN/BLK 1
GRN 2
BRN 3
GRY 4
VIO 5
PNK 6
RED/BLU 7
BLU/BLK 8
GRN 9
BLU/RED 10
GRN/BLK 11
BLK 12
YEL 13
LT GRN 14
BLU/YEL 15
GRY 16
BLU 17
RED 18
WHT 19
BLU 20
LT GRN 21
WHT 22
LT GRN/RED 23
PNK/BLK 24
PNK 25
BLK 26
GRN/RED 27
YEL 28
GRN/BLK 29
GRN 30
WHT 31
WHT 32
LT GRN 33
NCA 34
WHT 35
BLK 36
WHT 37
RED 38
GRN 39
WHT 40
NCA 41
WHT 42
WHT 43
BLU/YEL 44
BLU/YEL
10 WHT
5 BLK
M7
TX1- TX1+
MULTI-DISPLAY
1 BLK
B
ANTENNA AMPLIFIER
BLK
GRN (OR PNK)
BLU
WHT/BLK
NCA WHT WHT
WHT WHT WHT WHT NCA LT GRN LT GRN NCA WHT WHT WHT/BLK LT GRN WHT WHT LT GRN WHT WHT
SG8 HP1L HP1R R-L- R-L+ R-R- R-R+ SG2 RMUT B+ SG9 HP2L HP2R GND LMUT TX+ TX- TMUT TX2+ TX2-
R26
REAR SEAT AUDIO CONTROLLER
I8
WHT/BLK
A
J/C 23
IL

188202