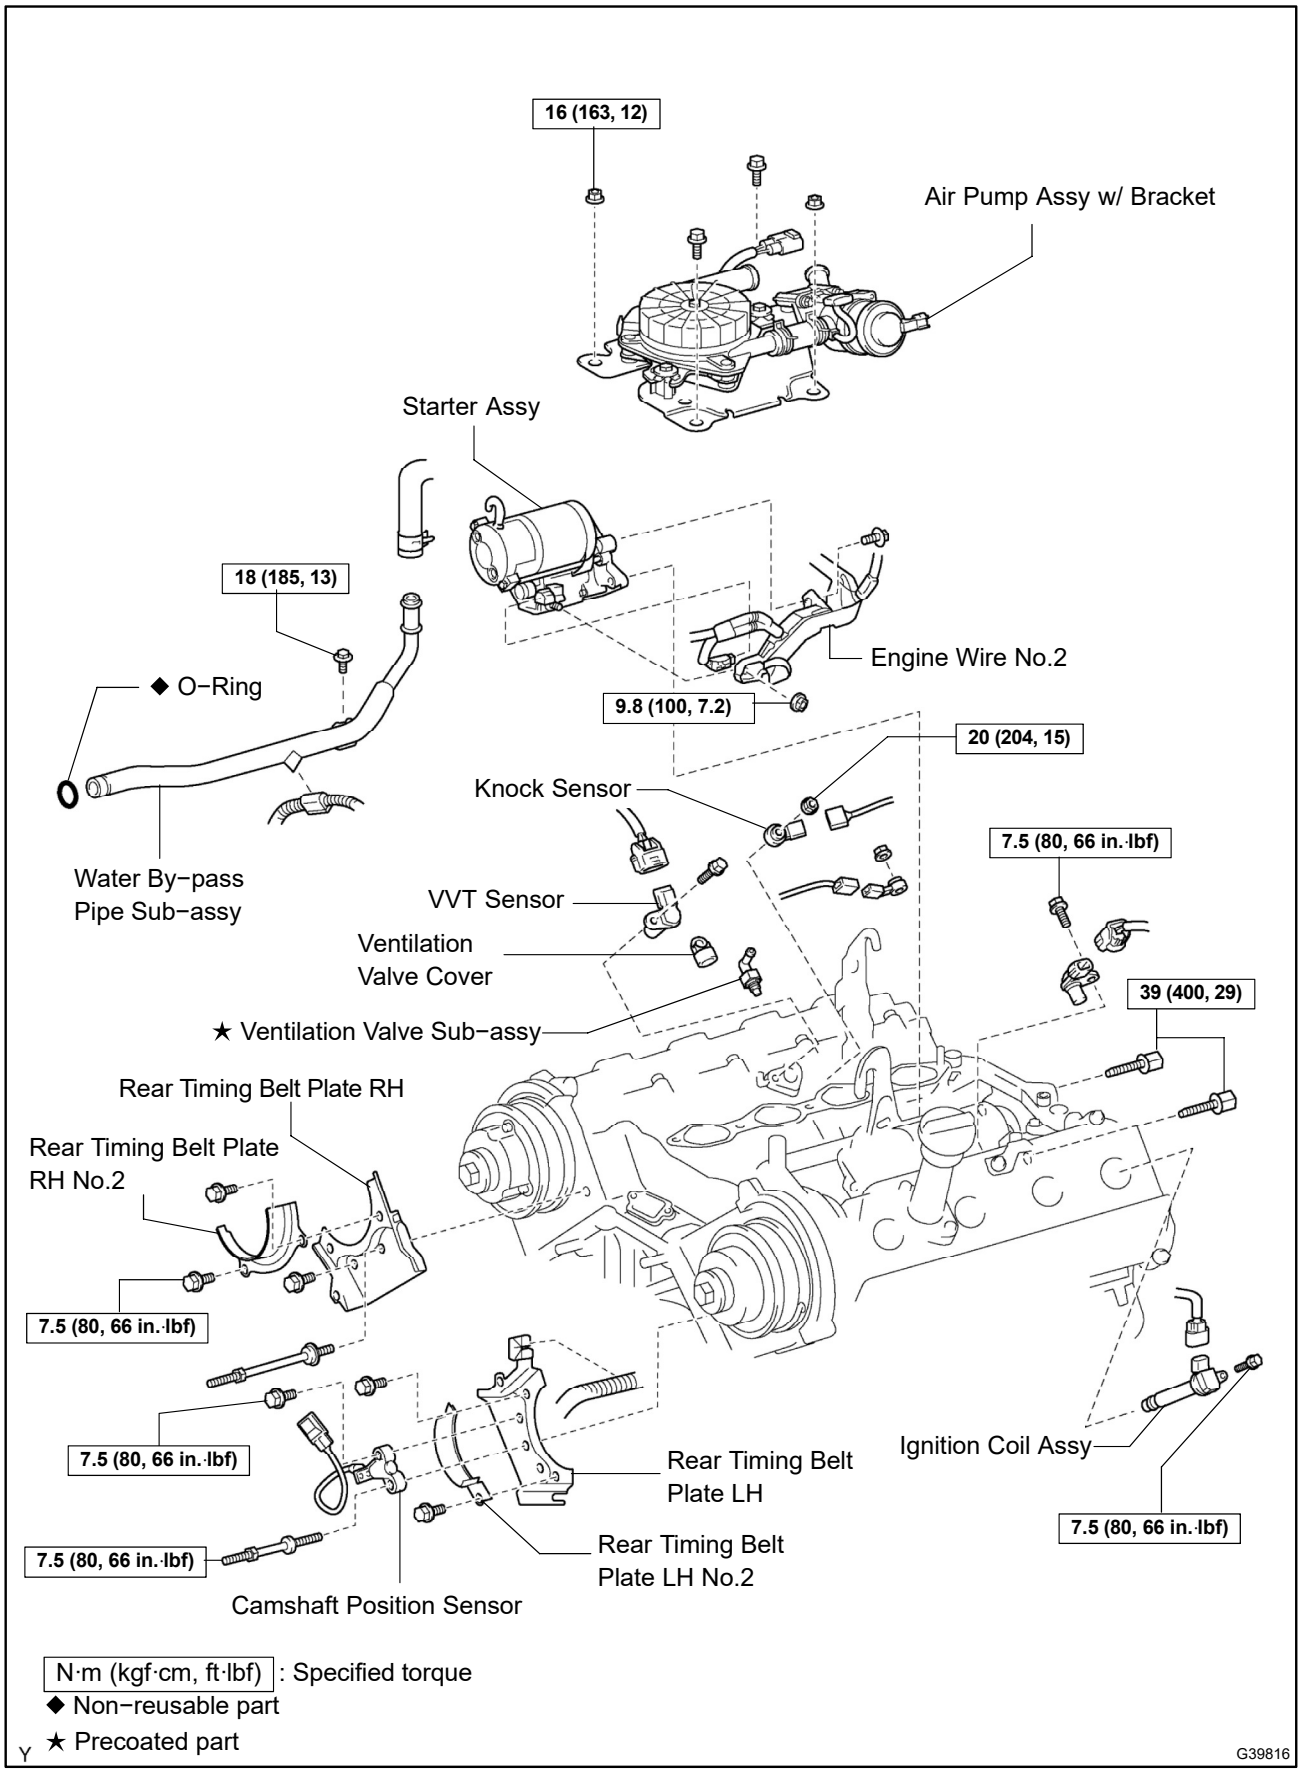
16 (163, 12)
Air Pump Assy w/ Bracket
Starter Assy
18 (185, 13)
◆ O−Ring
Engine Wire No.2
9.8 (100, 7.2)
20 (204, 15)
Knock Sensor
7.5 (80, 66 in.·lbf)
Water By−pass
Pipe Sub−assy
VVT Sensor
Ventilation
Valve Cover
39 (400, 29)
★ Ventilation Valve Sub−assy
Rear Timing Belt Plate RH
Rear Timing Belt Plate
RH No.2
7.5 (80, 66 in.·lbf)
7.5 (80, 66 in.·lbf)
Rear Timing Belt
Plate LH
Ignition Coil Assy
7.5 (80, 66 in.·lbf)
7.5 (80, 66 in.·lbf)
Rear Timing Belt
Plate LH No.2
Camshaft Position Sensor
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non−reusable part
★ Precoated part
Y
G39816