

Last Modified: 7-13-2007		1.6 A
Service Category: Brake	Section: Parking Brake	
Model Year: 2008	Model: ES350	Doc ID: RM0000022KK00LX
Title: PARKING BRAKE: PARKING BRAKE PEDAL: REASSEMBLY (2008 ES350)		


REASSEMBLY

1. INSTALL PARKING PEDAL PAD




(a) Install the parking pedal pad to the parking brake pedal assembly.

2. INSTALL PARKING BRAKE SWITCH ASSEMBLY

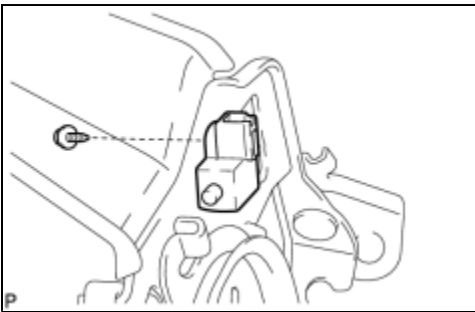

(a) Install the parking brake switch assembly with the screw.


3. INSTALL NO. 1 PARKING BRAKE CABLE ASSEMBLY

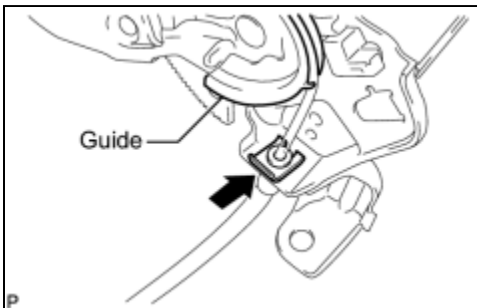

(a) Pass the No. 1 parking brake cable assembly through the guide of the parking brake pedal.

(b) Using a brass bar and a hammer, install the clip to the No. 1 parking brake cable assembly.


(c) Temporarily tighten the the lock nut and No. 1 wire adjusting nut.

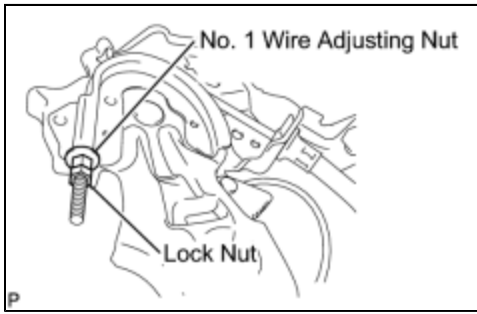

NOTICE:

Fully tighten the lock nut and the No. 1 wire adjusting nut when adjusting the parking brake pedal travel.

Torque: 5.4 N·m (55 kgf·cm, 48 in·lbf)

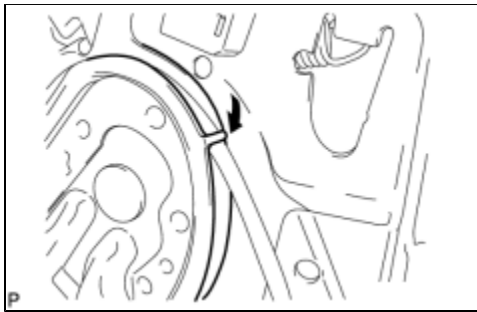

(d) Bend the parking brake pedal claw.

