

20. INSTALL NO. 2 TIMING BELT COVER

- (a) Install the gasket on the timing belt cover.
- (b) Using a 5 mm hexagon wrench, install the timing belt cover with the 3 bolts.

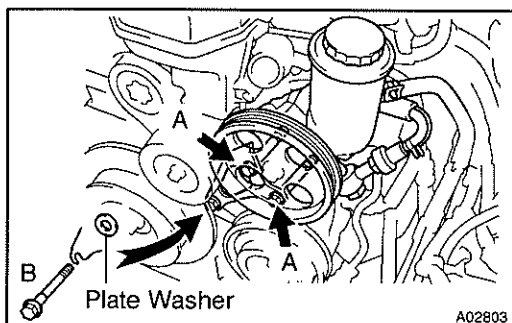
Torque: 8.0 N·m (80 kgf·cm, 71 in.·lbf)

21. INSTALL NO. 3 TIMING BELT COVER

- (a) Install the gasket on the timing belt cover.
- (b) Using a 5 mm hexagon wrench, install the timing belt cover with the 4 bolts.

Torque: 8.0 N·m (80 kgf·cm, 71 in.·lbf)

- (c) Install the oil filler cap.

**22. INSTALL PS PUMP AND FRONT BRACKET**

- (a) Temporarily install the vane pump to the bracket.
- (b) Install the plate washer and front bracket with the 3 bolts.

Torque:

58 N·m (590 kgf·cm, 43 ft·lbf) for bolt A

52 N·m (530 kgf·cm, 38 ft·lbf) for bolt B

23. INSTALL DRIVE BELT (See page CH-1)**24. M/T:****INSTALL DRIVE BELT TENSIONER ABSORBER**

Install the absorber with the 2 nuts.

Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

25. INSTALL RADIATOR ASSEMBLY (See page CO-23)**26. FILL ENGINE WITH COOLANT****27. START ENGINE CHECK FOR LEAKS****28. INSTALL ENGINE UNDER COVER****29. ROAD TEST**

Check for abnormal noise, shock, slippage, correct shift points and smooth operation.

30. RECHECK ENGINE COOLANT LEVEL