


VSV FOR VAPOR PRESSURE SENSOR INSPECTION

SFOG2-01

1. REMOVE LH FRONT FENDER LINER
2. REMOVE VSV FOR VAPOR PRESSURE SENSOR
 - (a) Disconnect the VSV connector.
 - (b) Disconnect the 3 EVAP hoses from the VSV.
 - (c) Remove the screw and VSV.

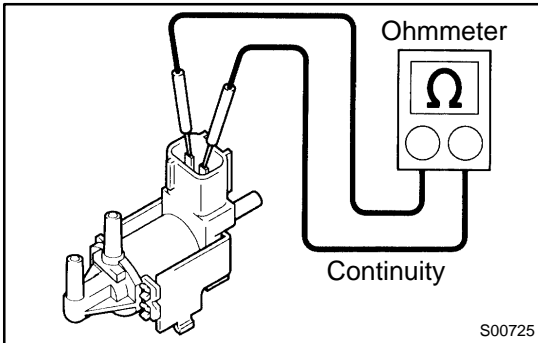


3. INSPECT VSV FOR OPEN CIRCUIT

Using an ohmmeter, check that there is continuity between the terminals.

Resistance:

37 – 44 Ω at 20°C (68°F)


If there is no continuity, replace the VSV.

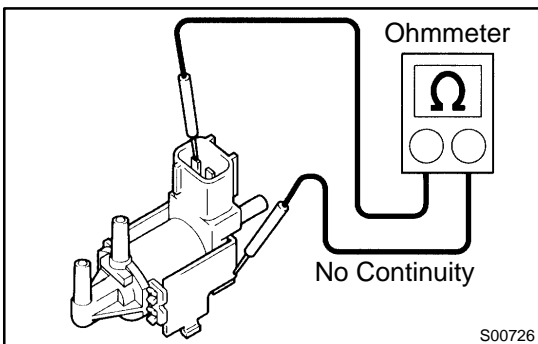

4. INSPECT VSV FOR GROUND


Using an ohmmeter, check that there is no continuity between each terminal and the body.

If there is continuity, replace the VSV.

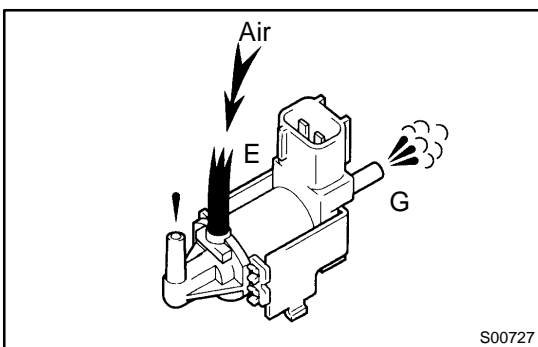

5. INSPECT VSV OPERATION

- (a) Check that the air flows from port E to G.

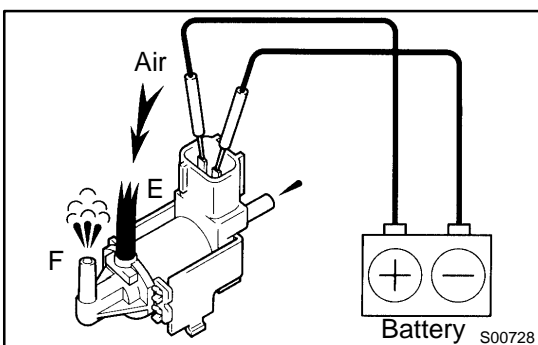

- (b) Apply battery voltage across the terminals.

- (c) Check that the air flows from port E to F.

If operation is not as specified, replace the VSV.

6. REINSTALL VSV

7. REINSTALL LH FRONT FENDER LINER